



**Programmable  
Low Temperature Incubator  
Model**

**IQ822**

**Instruction Manual**

- First Edition -

- Thank you for purchasing "Programmable Low Temperature Incubator, **IQ822**" of Yamato Scientific Co., Ltd.
- To use this unit properly, read this "Instruction Manual" thoroughly before using this unit. Keep this instruction manual around this unit for referring at anytime.



**WARNING!:**

Carefully read and thoroughly understand the important warning items described in this manual before using this unit.

**Yamato Scientific Co., LTD.**

This paper has been printed on recycled paper.



|   |    |
|---|----|
| ◆ Cautions in Using with Safety .....                           | 1  |
| • Explanation.....  | 1  |
| • Table of Illustrated Symbols .....                            | 2  |
| • Fundamental Matters of "WARNING!" and "CAUTION!" .....        | 3  |
| ◆ Before Using this unit .....                                  | 4  |
| • Requirements for Installation.....                            | 4  |
| • Defrost in Refrigerator .....                                 | 8  |
| ◆ Description and Function of Each Part .....                   | 9  |
| • Main Unit .....   | 9  |
| • Main Unit Structure.....                                      | 10 |
| • Control Panel.....  | 11 |
| • Defrost Control Panel.....                                    | 12 |
| • Characters of the Controller .....                            | 13 |
| ◆ Operation Method .....  | 14 |
| • Operation Mode and Function List .....                        | 14 |
| • Operation Mode, Function Setting Key, and Characters .....    | 16 |
| • Setting of Overheating Prevention Device .....                | 17 |
| • Fixed Temperature Operation.....                              | 18 |
| • Quick Auto Stop Operation.....                                | 19 |
| • Auto Stop Operation.....                                      | 20 |
| • Auto Start Operation.....                                     | 22 |
| • Program Operation.....  | 24 |
| • Other Functions.....  | 31 |
| ◆ Handling Precautions .....                                    | 32 |
| ◆ Maintenance Method.....                                       | 34 |
| • Daily Inspection and Maintenance .....                        | 34 |
| ◆ Long storage and disposal.....                                | 35 |
| • When not using this unit for long term / When disposing ..... | 35 |
| ◆ In the Event of Failure... ..                                 | 36 |
| • Safety Device and Error Code.....                             | 36 |
| • Trouble Shooting .....  | 37 |
| ◆ After Service and Warranty .....                              | 38 |
| ◆ Specification .....   | 39 |
| ◆ Wiring Diagram.....   | 41 |
| ◆ Replacement Parts Table.....                                  | 42 |
| ◆ Reference .....   | 43 |
| • List of Dangerous Substances .....                            | 43 |


## Explanation


### MEANING OF ILLUSTRATED SYMBOLS

#### Illustrated Symbols

Various symbols are used in this safety manual in order to use the unit without danger of injury and damage of the unit. A list of problems caused by ignoring the warnings and improper handling is divided as shown below. Be sure that you understand the warnings and cautions in this manual before operating the unit.

---

 **WARNING!** If the warning is ignored, there is the danger of a problem that may cause a serious accident or even fatality.

 **CAUTION!** If the caution is ignored, there is the danger of a problem that may cause injury/damage to property or the unit itself.

---

### Meaning of Symbols



This symbol indicates items that urge the warning (including the caution).  
A detailed warning message is shown adjacent to the symbol.



This symbol indicates items that are strictly prohibited.  
A detailed message is shown adjacent to the symbol with specific actions not to perform.



This symbol indicates items that should be always performed.  
A detailed message with instructions is shown adjacent to the symbol.

## Table of Illustrated Symbols

### Warning



Warning,  
generally



Warning,  
high voltage



Warning,  
high temperature



Warning,  
drive train



Warning,  
explosive

### Caution



Caution,  
generally



Caution,  
electrical shock



Caution,  
scald



Caution,  
no road heating



Caution,  
not to drench



Caution,  
water only



Caution,  
deadly poison

### Prohibit



Prohibit,  
generally



Prohibit,  
inflammable



Prohibit,  
to disassemble



Prohibit,  
to touch

### Compulsion



Compulsion,  
generally



Compulsion,  
connect to the  
grounding  
terminal



Compulsion,  
install on a flat  
surface



Compulsion,  
disconnect the  
power plug



Compulsion,  
periodical  
inspection

## Cautions in Using with Safety

### Fundamental Matters of "WARNING!" and "CAUTION!"

#### **WARNING!**

##### **Do not use this unit in an area where there is flammable or explosive gas**

Never use this unit in an area where there is flammable or explosive gas. This unit is not explosion-proof. An arc may be generated when the power switch is turned on or off, and fire/explosion may result. (Refer to page 43 "List of Dangerous Substances".)

##### **Always ground this unit**

Always ground this unit on the power equipment side in order to avoid electrical shock due to a power surge.

##### **If a problem occurs**

If smoke or strange odor should come out of this unit for some reason, turn off the power key right away, and then turn off the circuit breaker and the main power. Immediately contact a service technician for inspection. If this procedure is not followed, fire or electrical shock may result. Never perform repair work yourself, since it is dangerous and not recommended.

##### **Do not use the power cord if it is bundled or tangled**

Do not use the power cord if it is bundled or tangled. If it is used in this manner, it can overheat and fire may be caused.

##### **Do not process, bend, wring, or stretch the power cord forcibly**

Do not process, bend, wring, or stretch the power cord forcibly. Fire or electrical shock may result.

##### **Substances that can not be used**

Never use explosive substances, flammable substances and substances that include explosive or flammable ingredients in this unit. Explosion or fire may occur. (Refer to page 43 "List of Dangerous Substances".)

##### **Do not disassemble or modify this unit**

Do not disassemble or modify this unit. Fire or electrical shock or failure may be caused.

##### **Do not touch high-temperature parts**

The inside of the body or the door may become hot during and just after operation. It may cause burns.

#### **CAUTION!**

##### **During a thunder storm**

During a thunderstorm, turn off the power key immediately, then turn off the circuit breaker and the main power. If this procedure is not followed, fire or electrical shock may be caused.


## Requirements for Installation

### **WARNING!**

#### 1. Always ground this unit



- Be sure to connect the earth wire (the green cable of power cord) to the grounding conductor or ground terminal to prevent accidents caused by electric leakage.
- Please consult your local electrical contractor for power connecting work.
- Do not connect the earth wire to gas or water pipes. If not, fire disaster may be caused.
- Do not connect the earth wire to the ground for telephone wire or lightning conductor. If not, fire disaster or electric shock may be caused.

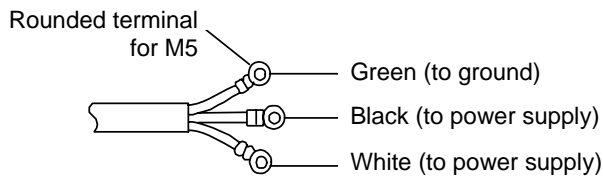

- ❖ The power plug is not equipped with this unit. Connect the ground wire correctly adjusting to the status of the power supply equipment side to be connected.

#### 2. Connect the power cord paying attention to the color of each core wire



- When connecting the power cord, do check the breaker on the electric power equipment be "OFF". Note that **IQ822** does not equip with the power plug. Select and connect the appropriate plug or terminal corresponding to the power capacity that is adjusted to the status of the power supply equipment side.

| Core Wire Color | Interior Wiring   |
|-----------------|-------------------|
| Black           | Power Supply Side |
| White           | Power Supply Side |
| Green           | Ground Wire Side  |


#### 3. Choose a proper place for installation



- Do not install this unit in a place where:
  - ◆ Rough or dirty surface.
  - ◆ Flammable gas or corrosive gas is generated.
  - ◆ Ambient temperature exceeds 35°C.
  - ◆ Ambient temperature fluctuates violently.
  - ◆ There is direct sunlight.
  - ◆ There is excessive humidity and dust.
  - ◆ There is a constant vibration.




- Install this unit on a stable place with the space as shown below.

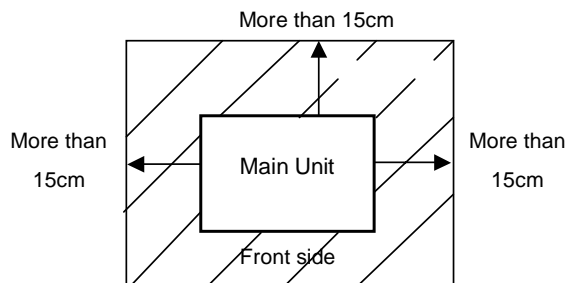

#### 4. Caution at defrost



- Catch drain from drain hose with a tray at defrost.

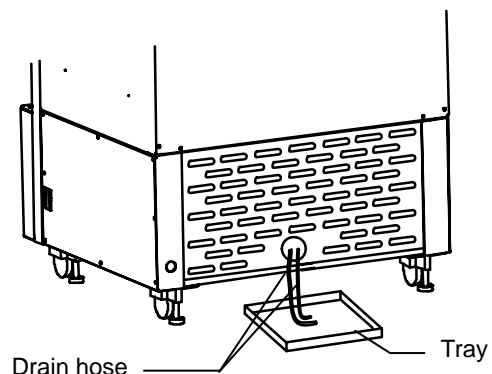


Note: The tray is not included in the attachments of unit.

## Requirements for Installation

### 5. Do not use this unit in an area where there is flammable or explosive gas (Refer to page 43 "List of Dangerous Substances".)




- Never use this unit in an area where there is flammable or explosive gas. This unit is not explosion-proof. An arc may be generated when the power switch is turned ON or OFF, and fire/explosion may result.

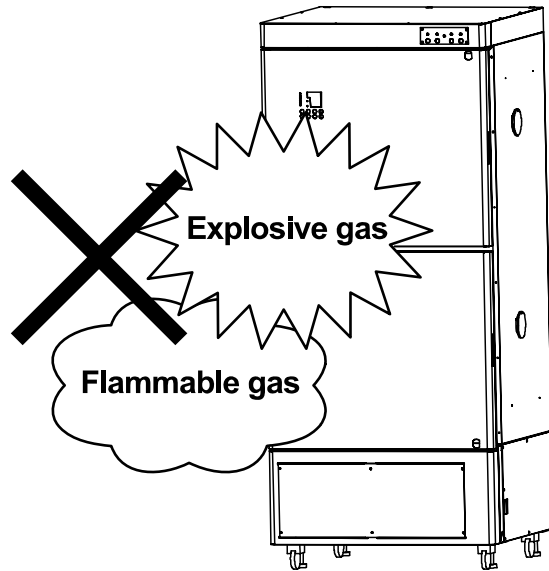

- Never use explosive substances, flammable substances and substances that include explosive or flammable ingredients in this unit. Explosion or fire may occur.

**Explosive  
substance**

**Flammable  
substance**

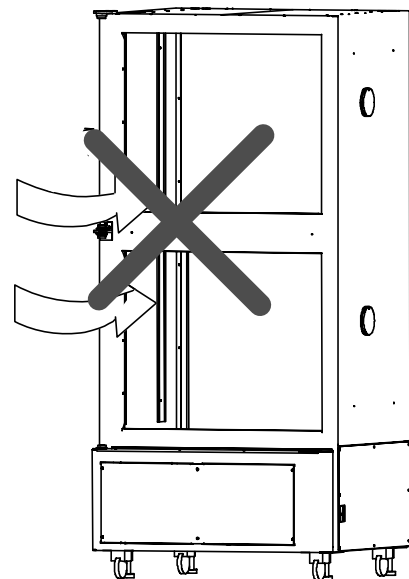




## Requirements for Installation

### 6. Do not modify



- Modification of this unit is strictly prohibited. This could cause a failure.


Modification

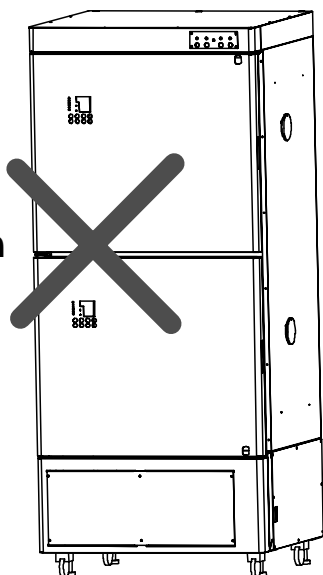

### 7. Installation on horizontal surface




- Set this unit to the flattest place. Setting this unit on rough or slope place could cause the vibration or noise, or cause the unexpected trouble or malfunction.

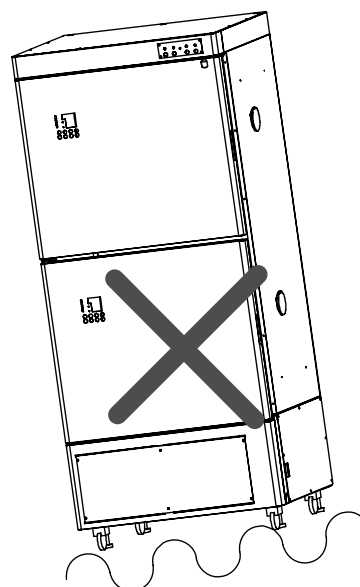

### 8. Do not make an overload




- The withstand load of shelf is 15kg (uniform load) Set the samples apart each other.

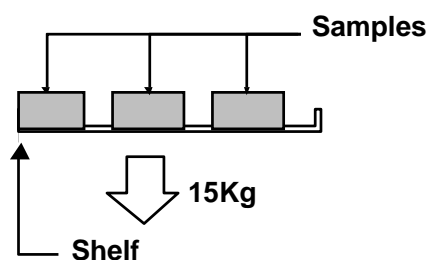

### 9. Do not set samples in close formation



- The temperature in furnace cannot be controlled if too much samples are set there. Make sure to use the shelf and set samples apart each other so as to make the free space of 30% or more to the furnace to acquire accuracy of temperature.

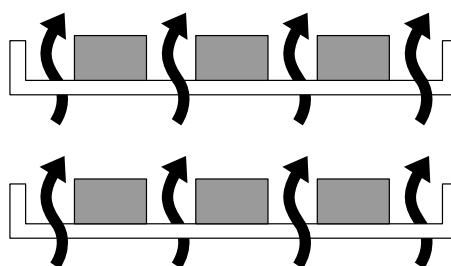

Make the free space of 30% or more

## Requirements for Installation

### **CAUTION!**

#### 10. Choose a correct power distribution board or receptacle



- Choose a correct power distribution board or receptacle that meets the unit's rated electric capacity.

**Electric capacity:**     [IQ822: 100V AC, 20A](#)

**NOTE)**

There could be the case that the unit does not run even after turning ON the power. Inspect whether the voltage of the main power is lowered than the specified value, or whether other device(s) uses the same power line of this unit. If the phenomena might be found, change the power line of this unit to the other power line.

#### 11. Before/after installing



- It may cause injury to a person if this unit falls down or moves by the earthquake and the impact. etc..To prevent, take measures that the unit cannot fall down, and not install to busy place.

#### 12. Handling of power code



- Do not entangle the power cord. This will cause overheating and possibly a fire.
- Do not bend or twist the power cord, or apply excessive tension to it. This may cause a fire and electrical shock.
- Do not lay the power cord under a desk or chair, and do not allow it to be pinched in order to prevent it from being damaged and to avoid a fire or electrical shock.
- Keep the power cord away from any heating equipment such as a room heater. The cord's insulation may melt and cause a fire or electrical shock.



- If the power cord becomes damaged (wiring exposed, breakage, etc.), immediately turn off the power at the rear of this unit and shut off the main supply power. Then contact your nearest dealer for replacement of the power cord. Leaving it may cause a fire or electrical shock.
- Connect the power plug to the receptacle which is supplied appropriate power and voltage.

#### 13. Notes for some kind of sample



- Stainless steel is used for interior; however, it may be corroded by strong acid etc. And the door packing made of rubber may be corroded by some kind of solvent, e.g. alkaline, oil, halogen etc.
- Much frost on the evaporator degrades the refrigeration capability, which may cause uncontrollability of setting temperature. Be careful, especially, to treat samples with large water content that generate much frost. Perform the defrost operation if frost is observed through the frost inspection window. ([Refer to next page.](#))
- The equipment with large heat load cannot be used because the temperature in furnace increases.

## Defrost in Refrigerator

Much frost on the evaporator degrades the refrigeration capability, which may cause uncontrollability of setting temperature. In the [IQ822](#), the condition of frost on the evaporator can be checked through the frost inspection window inside furnace. The frosting speed varies depending on the following conditions.

- 1) Temperature used ······ Easily frosted when using the unit in low temperature
- 2) External temperature/humidity ······ Easily frosted when external temperature/humidity is higher
- 3) Sample in furnace ······ Easily frosted when sample contains much water

The following operations can be set to take measure against frosting in the [IQ822](#). Set either of them depending on the situation. The fixed temperature and program operation are available there by pressing the DEFROST key on the defrost control panel, in addition to the program operation.

- ① Manual defrost operation (manual start/automatic stop):  
Perform the defrost operation if much frost is in the evaporator. The operation is started manually and stopped automatically with the built-in timer after 5-minute operation.  
→Refer to the page 12 for the operating instructions.
- ② Cycle defrost operation (Automatic start/stop):  
In the case of operating the unit for a long term, it is available to set the cycle defrost operation. Both approx. 5-minute operation and 23-hour-and-55-minute stop are repeated automatically.  
→Refer to the page 12 for the operating instructions.

### **CAUTION!**

- The temperature in furnace increases about 3°C at the defrost operation. Be careful if it affects the samples. The indicated temperature may increase more than 10°C at that time. (The increasing temperature is depending on the setting temperature, sample, and air temperature.)


### **Compensation Operation for Power Failure**

- In the case of occurring the power failure during operation, the unit restarts the operation from just the status that the power is turned OFF.
- The unit memorizes the remaining timing every one minute after starting the operation.


# Description and Function of Each Part

## Main Unit

### Front view

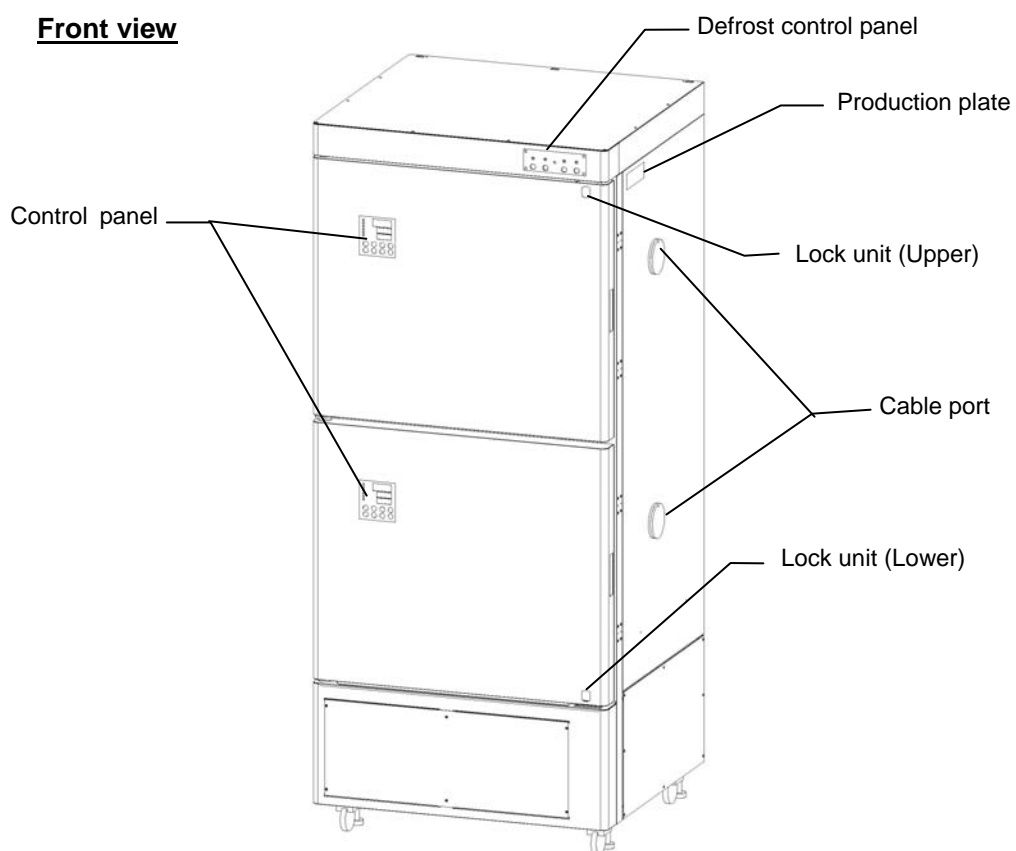


### Rear view

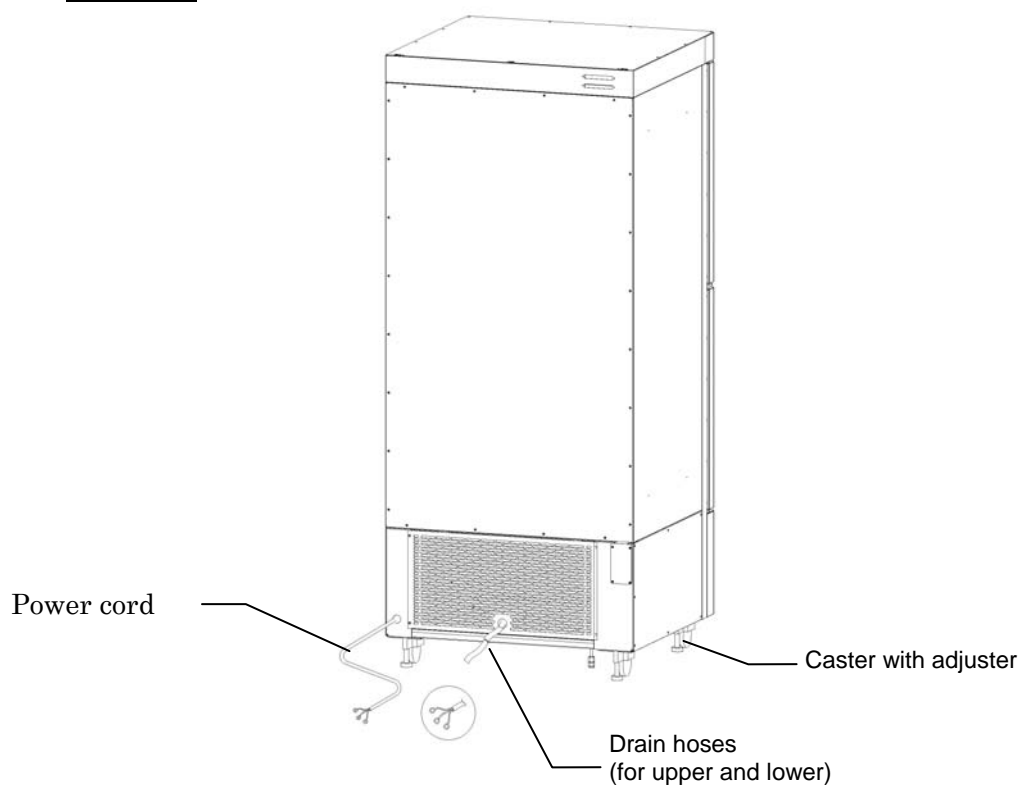


# Description and Function of Each Part

## Main Unit Structure

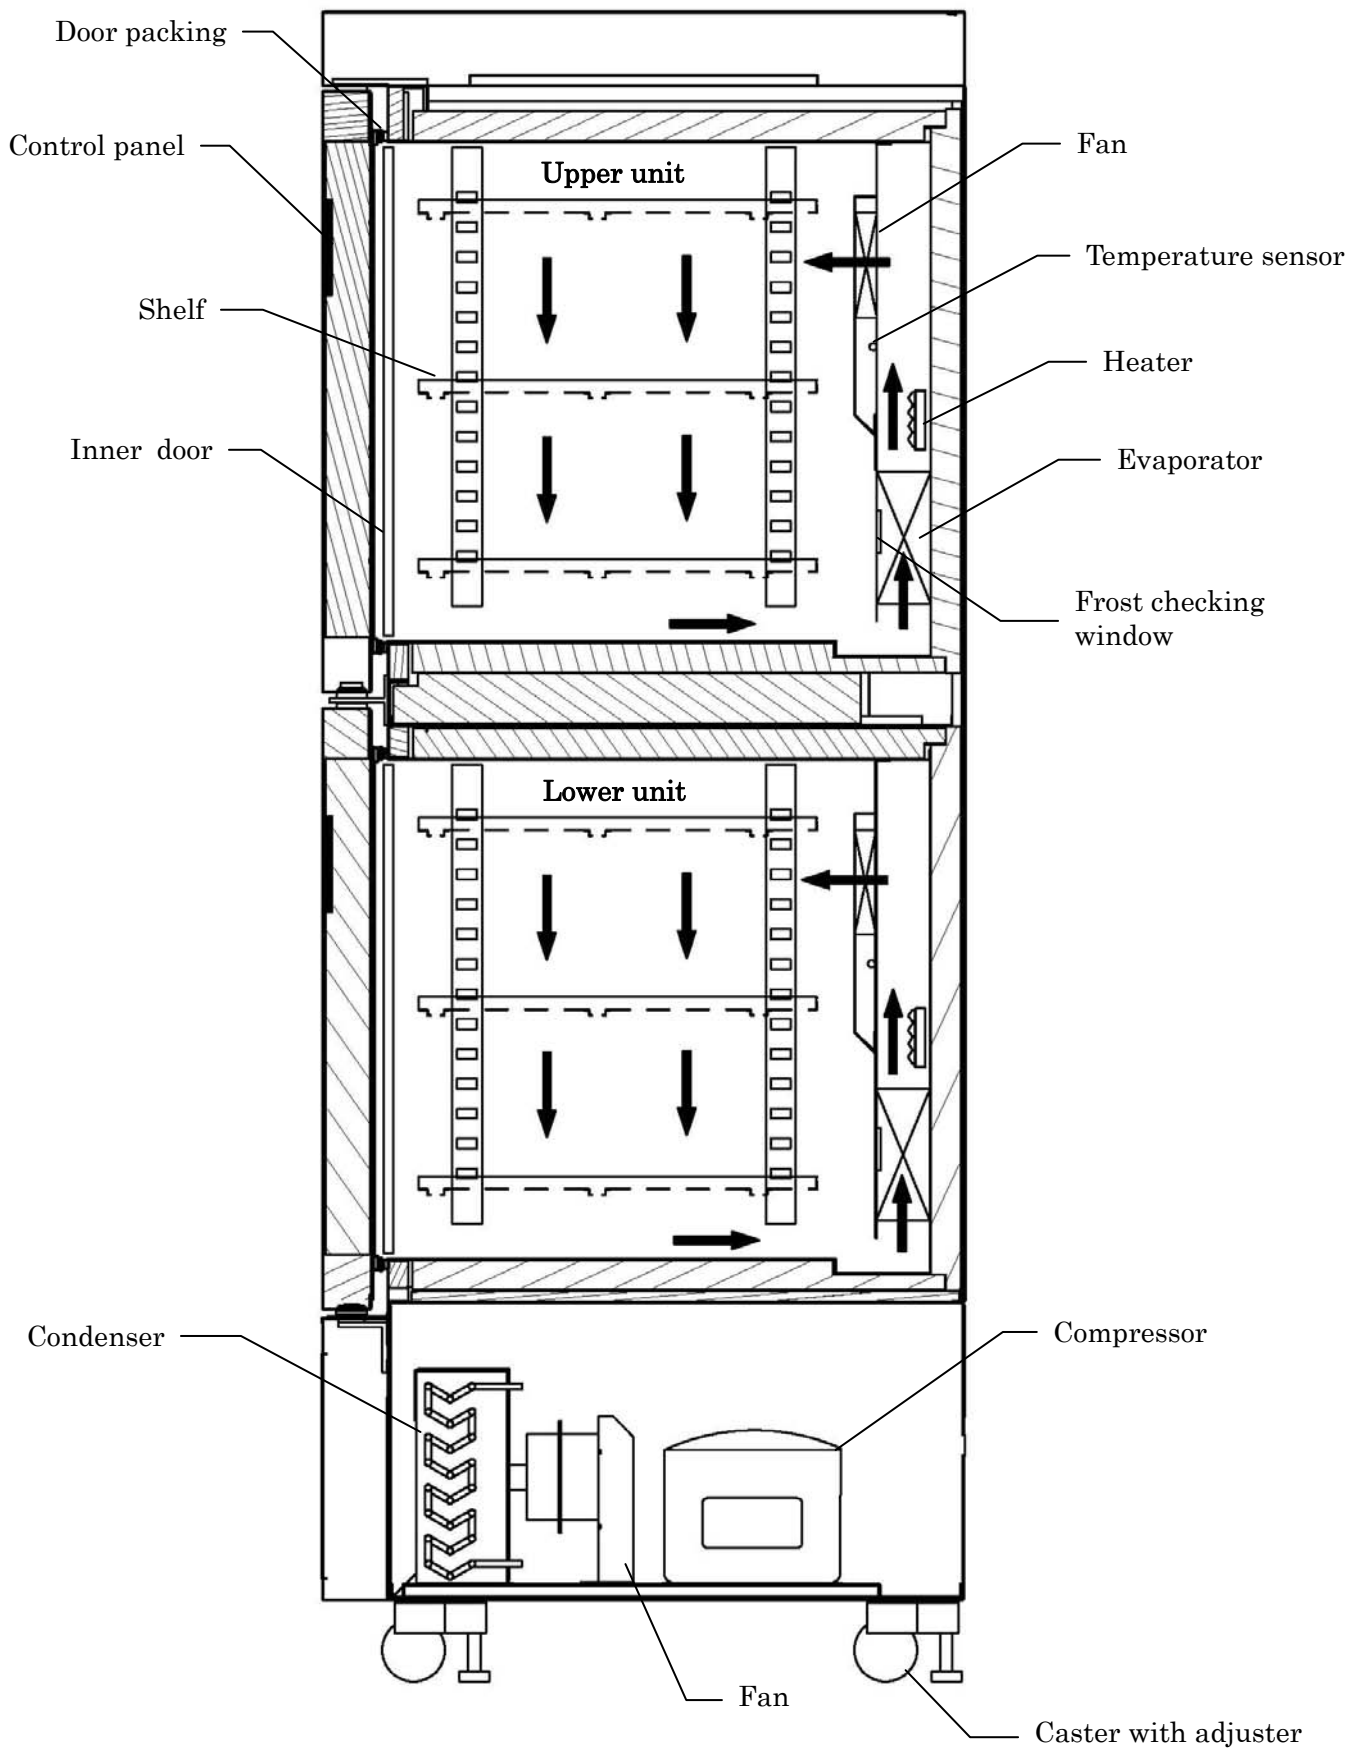

# Description and Function of Each Part


## Control Panel

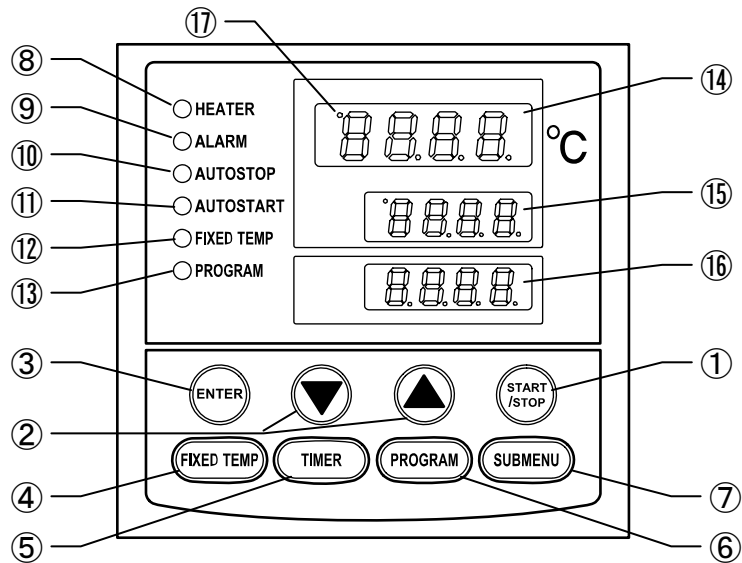

| No. | Name   | Function  |
|-----|--|---|
| ①   | START/STOP Key :                             | Starts/stops the operation.   |
| ②   | ▲▼ Key :                                     | Uses for rising UP/lowering DOWN the setting value.   |
| ③   | ENTER Key :                                  | Settles the inputted value.   |
| ④   | FIXED TEMP Key :                             | Chooses the fixed temperature operation.  |
| ⑤   | TIMER Key :                                  | Chooses the timer operation (Quick Auto Stop/Auto Stop/Auto Start).   |
| ⑥   | PROGRAM Key :                                | Chooses the program operation or program creation mode.   |
| ⑦   | SUBMENU Key :                                | Uses for setting the overheating prevention temperature, calibration offset temperature, key lock function, or program repeat function. |
| ⑧   | HEATER Lamp :                                | Lights while the heater works.  |
| ⑨   | ALARM Lamp :                                 | Lights up when an error occurs. (Buzzer sounds simultaneously.)   |
| ⑩   | AUTO STOP Lamp :                             | Blinks while setting quick auto stop timer or auto stop timer.<br>Lights while quick auto stop timer or auto stop timer is running.     |
| ⑪   | AUTO START Lamp :                            | Blinks while setting auto start timer.<br>Lights while auto start timer is running.   |
| ⑫   | FIXED TEMP Lamp :                            | Blinks while setting fixed temperature operation.<br>Lights while fixed temperature operation is running.                               |
| ⑬   | PROGRAM Lamp :                               | Blinks while setting program operation.<br>Lights while program operation is running.   |
| ⑭   | Measurement Temperature Display :            | Displays the measured temperature, setting character, alarm information.  |
| ⑮   | Setting Temperature Display :                | Displays the setting temperature, setting value for timer mode, remaining time.   |
| ⑯   | Overheating Prevention Temperature Display : | Displays the setting temperature for overheating prevention device.   |
| ⑰   | Refrigerator Lamp :                          | Lights while the refrigerator works.  |

# Description and Function of Each Part

## Defrost Control Panel

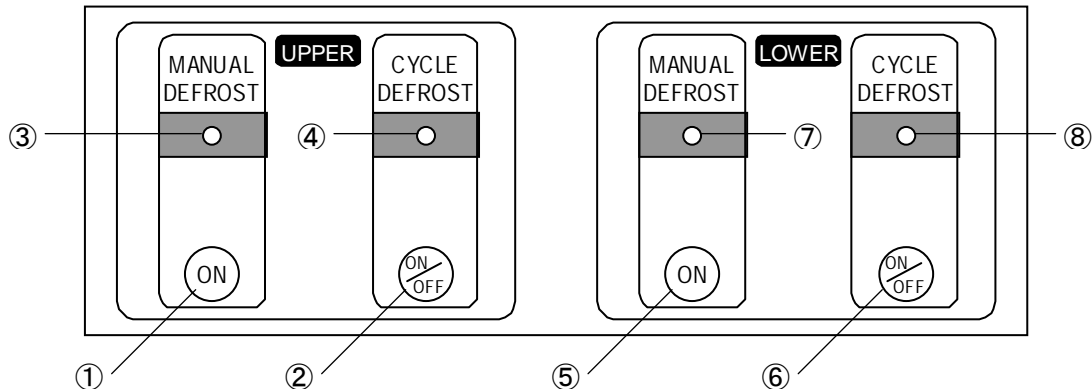

| No. | Name                              | Function  |
|-----|-----------------------------------|---|
| ①   | Manual Defrost Key (Upper Stage)  | Uses this key for activating the manual defrost function of the upper stage.  |
| ②   | Cycle Defrost Key (Upper Stage)   | Uses this key for activating the cycle defrost function of the upper stage.   |
| ③   | Manual Defrost Lamp (Upper Stage) | Lights this lamp during performing the manual defrost function of the upper stage.  |
| ④   | Cycle Defrost Lamp (Upper Stage)  | Lights this lamp in the following status: <ul style="list-style-type: none"> <li>- The cycle defrost function of the upper stage is under operation during the defrost operation.</li> <li>- The cycle defrost function is under operation with the defrost stopped.</li> </ul> |
| ⑤   | Manual Defrost Key (Lower Stage)  | Uses this key for activating the manual defrost function of the upper stage.  |
| ⑥   | Cycle Defrost Key (Lower Stage)   | Uses this key for activating the cycle defrost function of the upper stage.   |
| ⑦   | Manual Defrost Lamp (Lower Stage) | Lights this lamp during performing the manual defrost function of the upper stage.  |
| ⑧   | Cycle Defrost Lamp (Lower Stage)  | Lights this lamp in the following status: <ul style="list-style-type: none"> <li>- The cycle defrost function of the upper stage is under operation during the defrost operation.</li> <li>- The cycle defrost function is under operation with the defrost stopped.</li> </ul> |

## Description and Function of Each Part

### Characters of the Controller

The characters VS4 controller shows are as follows:

| Character | Identifier  | Name                           | Purpose  |
|-----------|-------------|--------------------------------|--|
|           | <b>FiX</b>  | Fixed Temperature Setting Mode | Used for starting the fixed temperature operation.   |
|           | <b>Sv</b>   | Temperature Setting            | Used for setting the temperature.  |
|           | <b>AStP</b> | Timer Setting Mode Display     | Represents the setting of quick auto stop or auto stop operation.  |
|           | <b>AStr</b> | Timer Setting Mode Display     | Represents the setting of auto start operation.  |
|           | <b>tim</b>  | Time Setting                   | Used for setting the time.   |
|           | <b>PrG3</b> | Program Type                   | Used for choosing program type from 1 to 3. (Refer to Page 24 "Program Operation".)  |
|           | <b>PAt</b>  | Program Pattern                | Used for choosing program pattern. (Refer to Page 24 "Program Operation".)   |
|           | <b>End</b>  | Step End                       | Represents the total number of the steps to be used. (Refer to Page 24 "Program Operation".)   |
|           | <b>Sv-1</b> | Program Temperature Setting    | Used for setting the temperature for each step in the program. (Sv-1 to Sv-30 is shown.)   |
|           | <b>t-1</b>  | Program Time Setting           | Used for setting the time for each step in the program. (t-1 to t-30 is shown.)  |
|           | <b>PS-3</b> | Step Number to be Repeated     | Used for choosing the step number to be repeated under the program operation with repeat function. (Refer to Page 28 "Use program repeat function".) |
|           | <b>Pc-2</b> | Repeating Times                | Used for setting the repeating times under the program operation with repeat function. (Refer to Page 28 "Use program repeat function".)             |
|           | <b>cAL</b>  | Calibration Offset Setting     | Used for inputting the calibration offset temperature. (Refer to Page 31 "Other Function".)  |
|           | <b>oH</b>   | Overheating Prevention Setting | Used for setting temperature for overheating prevention device. (Refer to Page 17 "Setting of Overheating Prevention Device".)                       |
|           | <b>LocK</b> | Key Lock                       | Locks the keys on control panel to protect from unnecessary operation. (Refer to Page 31 "Other Function".)  |
|           | <b>nG</b>   | Parameter Edit Unavailable     | It shows up when trying to change the parameter (except temperature and time of the timer or program mode) during operation.                         |

\* Also refer to Page 16 "Operation Mode, Function Setting Key, and Characters".



## Operation Mode and Function List

All the operation mode of this unit is as follows;

| No. | Name                        | Description   | Page |
|-----|-----------------------------|---|------|
| 1.  | Fixed Temperature Operation | Pressing the FIXED TEMP key enters into the fixed temperature operation setting mode.<br>Pressing it again enters into the temperature setting mode.<br>The "▲▼" are used to set temperature.<br>Pressing the START/STOP key starts or stops operation.   | 18   |
| 2.  | Quick Auto Stop Operation   | This operation is used to specify the period up to automatic stop during operation.<br>The period up to operation stop can be set by pressing the TIMER key during fixed temperature operation.<br>The "▲▼" are used to set the time.<br>Pressing the START key starts the quick auto stop operation, activates the timer function and stops the operation automatically after specified period.            | 19   |
| 3.  | Auto Stop Operation         | This operation is used to specify the automatic stop time in the fixed temperature operation.<br>Pressing the TIMER key displays "AS t p".<br>The setting temperature "Sv" can be set by pressing the ENTER key.<br>The operation time "tim" can be set by pressing it again.<br>Pressing the START/STOP key starts the auto stop operation.  | 20   |
| 4.  | Auto Start Operation        | This operation is used to specify the period up to automatic start after power on.<br>Pressing the TIMER key displays "AS t r".<br>The setting temperature "Sv" can be set by pressing the ENTER key.<br>The operation time "tim" can be set by pressing it again.<br>Pressing the START/STOP key starts the auto start operation.  | 22   |
| 5.  | Program Operation           | This operation is used to change the temperature according to the setting temperature and time.<br>Pressing the PROGRAM key displays "PrG1".<br>Press it again to select the program mode.<br>Press the ENTER key to select the pattern "PA t". Press the ENTER key to display "End". Input the number of patterns to be used.<br>Input the temperature and time of patterns "SV-n" and "t-n" respectively. | 24   |

NOTE) This unit is impossible to be changed the mode during the operation. If the mode requires to be changed, stop the operation.


## Operation Mode and Function List

The operation function of this unit is as follows;

| No. | Name  |                                      | Description  | Page |
|-----|---|--------------------------------------|--|------|
| 1.  | Overheating prevention function                         | Auto overheating prevention function | This function is set to be automatically activated (auto reset) when the temperature exceeds the setting temperature by 6°C.   | 17   |
|     |   | Overheating prevention device        | Though the device shares power source, display, and key input with the controller, it has independent temperature measurement circuit, CPU, sensor and output circuit. Overheating prevention temperature can be set using the operation panel.<br>The unit stops operation when the device is activated. The unit starts operation again when the POWER switch is pressed again (manual reset). |      |
| 2.  | Calibration offset function                             |                                      | This calibration offset function is for calibrating the difference occurred between the required in-furnace temperature and control temperature (sensor temperature) of the controller. This unit can be calibrated toward either plus side or minus side of the whole temperature range.  | 31   |
| 3.  | Overheating prevention temperature calibration function |                                      | The temperature of overheating prevention device is automatically corrected when the temperature of controller is collected.   | -    |
| 4.  | Recovery at power failure                               |                                      | The unit starts operation with the same condition as just before power failure if it occurs during operation.  | -    |
| 5.  | Setting value locking                                   |                                      | This function locks the established operation status.<br>It can be set and cancelled with the SUBMENU key.   | 31   |

## Operation Mode, Function Setting Key, and Characters

The operation mode setting and function setting use the key operation and characters show in the following figure.

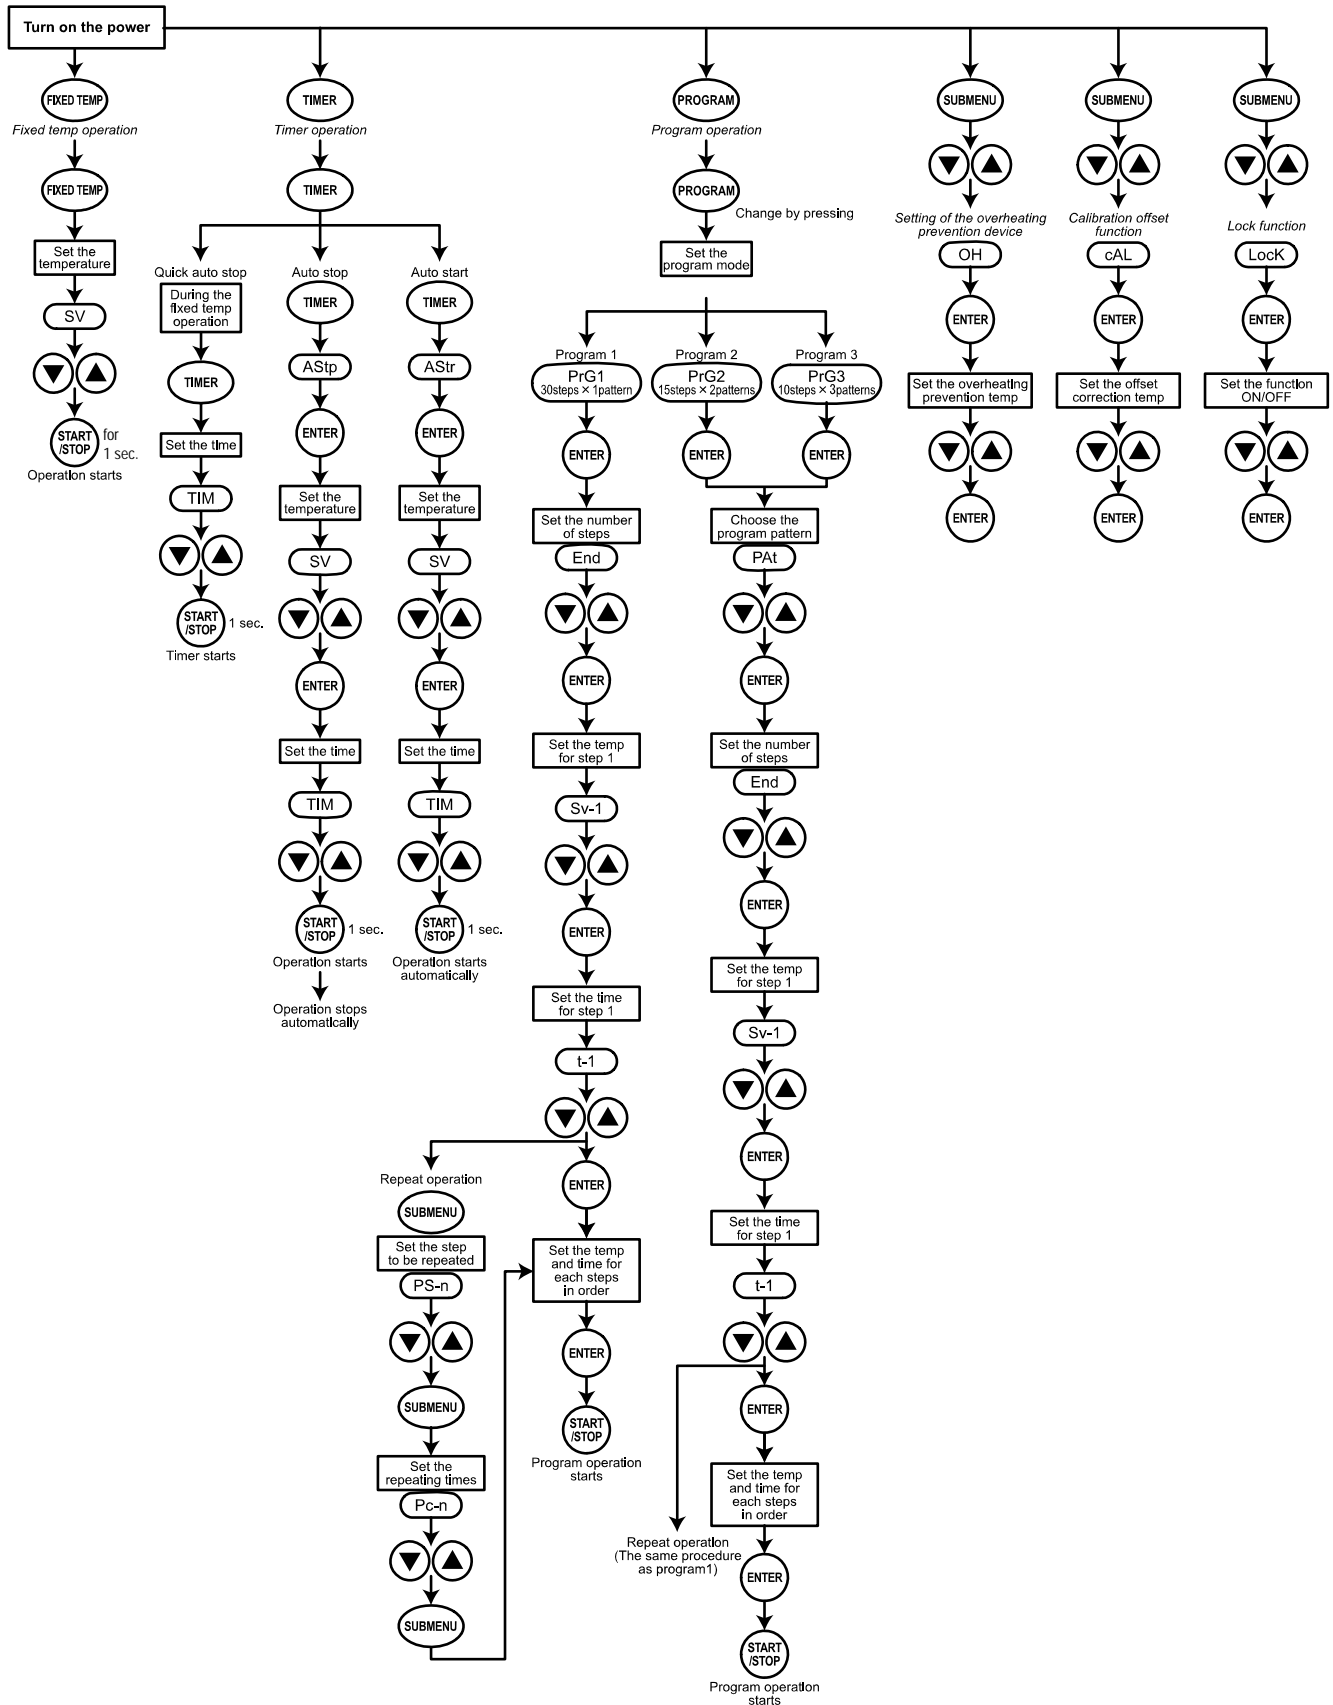

## Setting of Overheating Prevention Device

The unit has the overheating prevention device (manual reset) that consists of independent temperature measurement circuit, CPU, sensor and output circuit (it shares power source, display, and key input with the controller) in addition to the automatic overheating prevention function (auto reset) in the controller.

The purpose of overheating prevention device is to protect the unit from overheating. It does not intend to protect the samples, or to protect them from the accident caused by the use of explosive or inflammability.

### Setting range/function

The unit has failsafe functions against overheating. One of them is built in the controller and previously set at factory shipment so to be automatically activated when the temperature exceeds the setting temperature of temperature controller by 6°C, where the heater repeats on and off.


The other is united with the controller, which can be set by operating the keys on the controller.

The setting range of latter is from 0°C to 65°C.

In case the temperature in furnace exceeds the setting temperature of controller to reach to that of overheating prevention device, the circuit is shut off and "Er19" is displayed with blinking on the screen of controller with buzzer sound.

If the device is once activated, "Er19" continues to be displayed until the power is newly turned on.

### Temperature setting procedure

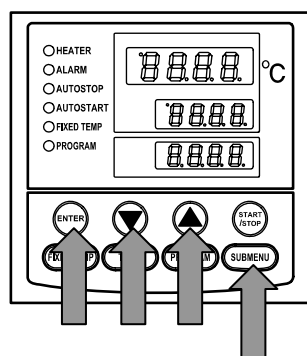

#### 1. Turn on the power (turn on the breaker in front)

- The default value is displayed for about four seconds after turning on the power. The screen then displays the initial setting. The current temperature in furnace, operation mode character and setting temperature of overheating prevention device are displayed on respective screens.

#### 2. Set the temperature for overheating prevention

- Press the SUBMENU key.
- Press the "▼▲" several times to select the setting character of overheating prevention temperature "OH".
- Press the ENTER key. The current setting temperature is displayed with blinking on the setting temperature screen.

**Note:** To prevent improper operation, set the value 10°C or more over the setting temperature of controller.

- Select the value using the "▼▲" and then press the ENTER key. This completes the setting.

### Notes:



- The standard setting temperature of device is "the maximum setting temperature of unit plus 5°C" or "setting temperature plus 5°C". If the unit performs improper operation, increase it 5°C more.
- The setting range of overheating prevention device is from 0°C to 65°C. Improper setting of temperature may cause inoperative of unit, malfunction of device, e.g. it is activated during increasing in temperature in furnace, or unexpected accidents such as fire disaster. To prevent such matters, set a proper value.


**The temperature is set to 65°C at factory shipment.**

## Fixed Temperature Operation

### Fixed temperature operation procedure

#### 1. Turn on the power (turn on the breaker in front)

- ❖ Current version of the software is displayed for about four seconds after turning on the power. The screen then displays the initial setting. The current temperature in furnace, operation mode character and setting temperature of overheating prevention device are displayed on respective screens.

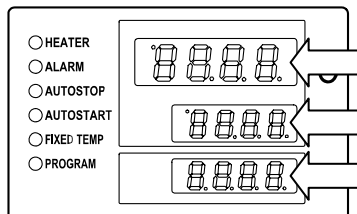

#### Measurement temperature screen:

Displays the current temperature in furnace.

#### Setting temperature screen:


Displays the operation mode character. (Refer to Page 13)

#### Overheating prevention screen:

Displays the setting temperature of overheating prevention device


#### 2. Select the operation mode

- Press the FIXED TEMP key to display "FIX", which indicates the fixed temperature operation, on the center display screen.

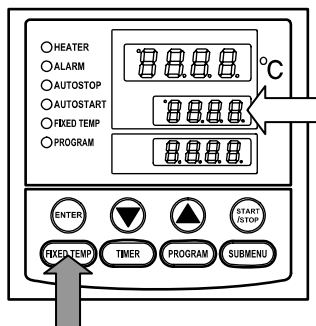

#### 3. Set the temperature

- Press the FIXED TEMP key again.
- The setting temperature screen displays the character "Sv" which indicates the temperature setting. Also it displays the current setting temperature with blinking. The FIXED TEMP lamp blinks, too.
- Set the temperature by pressing the "▼▲".

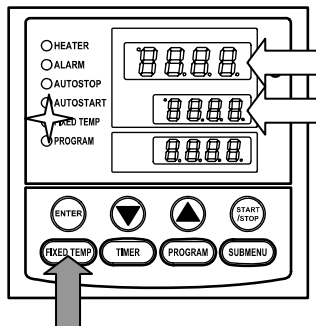


#### 4. Start operation

- Press the orange START/STOP key for about one second. The unit starts operation and the blinking FIXED TEMP lamp lights on.

#### 5. Stop operation

- Press the orange START/STOP key for about one second. The unit stops operation and the FIXED TEMP lamp lights off. The screen returns to the initial setting screen.

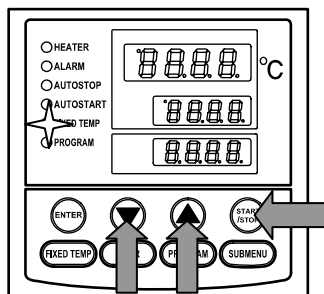

### To correct or check setting...


Press the FIXED TEMP key again to correct or check the setting.

Changing the setting temperature during operation is also possible by pressing the FIXED TEMP key.

Press the ENTER key after changing the setting.

## Quick Auto Stop Operation

### Quick auto stop operation procedure

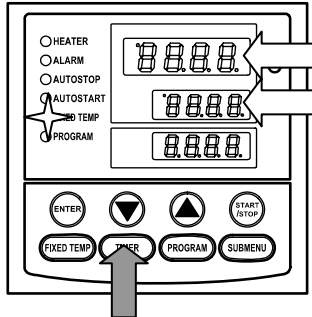


This operation is used to specify the period up to automatic stop, i.e., sets the auto stop timer during operation.

#### 1. Set the time up to stop during fixed temperature operation

- Check that the FIXED TEMP lamp lights on and that the unit is under operation.
- Press the TIMER key.
- The measurement temperature display screen displays the character "tim", which indicates the timer setting. The setting temperature display screen displays the current setting time with blinking.
- Select the time by pressing the "▼▲".


#### Timer function:

- The maximum setting time is "999 hours and 50 minutes".
- The time can be set in increments of a minute under 99 hours and 59 minutes.
- It can be set in increment of ten minutes over 100 hours.
- The "▼▲" can change the setting time quickly when it is pressed continuously. Press them discontinuously when fine adjustment is needed.

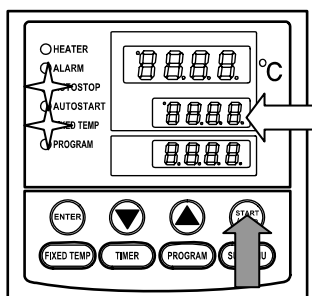

#### 2. Start timer operation

- Press the START/STOP key for one second after deciding the time.
- Timer operation starts with the FIXED TEMP and AUTO STOP lamps lighting on.
- The timer is activated at the point when the START/STOP key is pressed.

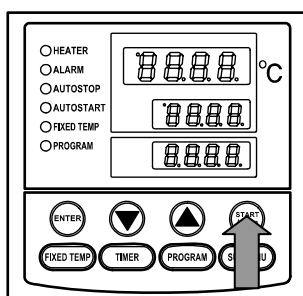

#### 3. Stop/terminate timer operation

- The operation stops automatically at setting time.
- Buzzer continues to sound for about five minutes at operation stop.
- The setting temperature screen displays the character "End", which indicates termination of operation, with the FIXED TEMP and AUTO STOP lamps lighting on. Press the START/STOP key to terminate the timer operation mode. The screen returns to the initial setting screen.

### To correct or check setting...


Changing the setting temperature during operation is possible by pressing the FIXED TEMP key. Press the ENTER key after changing the setting.

Changing the setting time during operation is possible by pressing the TIMER key. (Note that the time setting is required using the value calculated by adding a new additional time to the already passed time in this case.) Press the START/STOP key after changing the setting.

Press the ▼ key to display the setting temperature, operation mode and residual time on the setting temperature screen.

## Auto Stop Operation

### Auto stop operation procedure

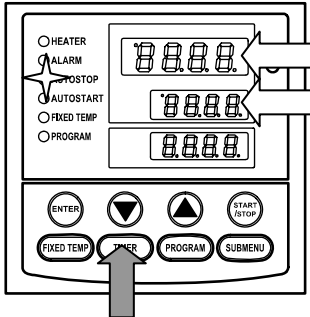


This operation is used to specify the automatic stop time in the fixed temperature operation.

#### 1. Set stop time

- ① Press the TIMER key on the initial screen.
- ② The timer mode used for previous operation is displayed on the setting temperature screen. Re-pressing the TIMER key blinks the timer mode. Re-pressing this TIMER key shifts the indication into the next timer mode with blinking. Select the character for auto stop operation "AStp", and press the ENTER key. The measurement temperature screen displays the character "Sv", which indicates the temperature setting. The setting temperature screen displays the current setting temperature with blinking. The AUTO STOP lamp blinks, too.
- ③ Set the temperature using the "▼▲".
- ④ Press the ENTER key. The measurement temperature display screen displays the character "tim", which indicates the timer setting. The setting temperature display screen displays the current setting time with blinking.
- ⑤ Set the time using the "▼▲".

#### Timer function:


- The maximum setting time is "999 hours and 50 minutes".
- The time can be set in increments of a minute under 99 hours and 59 minutes.
- It can be set in increment of ten minutes over 100 hours.
- The "▼▲" can change the setting time quickly when it is pressed continuously. Press them discontinuously when fine adjustment is needed.

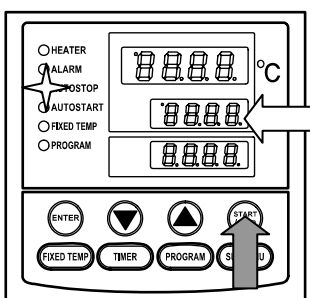

#### 2. Start timer operation

- Press the START/STOP key for one second after deciding the time.
- Timer operation starts with the AUTO STOP lamp lighting on.
- The timer is activated at the point when the temperature in furnace (measurement temperature) reaches to the setting temperature.

## Auto Stop Operation

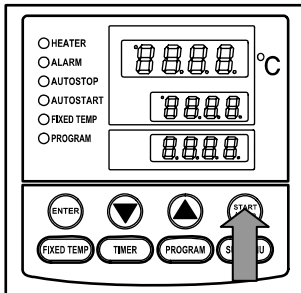

### 3. Stop/terminate timer operation

- The operation stops automatically at setting time.
- Buzzer continues to sound for about five minutes at operation stop.
- The setting temperature screen displays the character "End", which indicates termination of operation, with the FIXED TEMP and AUTO STOP lamps lighting on. Press the START/STOP key to terminate the timer operation mode. The screen returns to the initial setting screen.

### To correct or check setting...

Changing the setting temperature or time during operation is possible by pressing the TIMER key. Use the "▼▲" to change the setting value. Press the ENTER key respectively after changing the setting. (Note that the time setting is required using the value calculated by adding a new additional time to the already passed time in this case.)


Press the "▼" to display the setting temperature, operation mode and residual time on the setting temperature screen.

When the dot is blinked, the indicator of the remaining time e.g. "1.30" indicates the countdown. When the dot is lit, the unit is under waiting (that is, the unit is under increasing or decreasing toward setting temperature), and the timer stop s counting.



## Auto Start Operation

### Auto start operation procedure

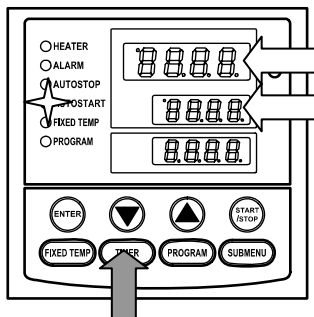


This operation is used to specify the period up to automatic start after power on.

#### 1. Set start time

- ① Press the TIMER key on the initial screen.
- ② The timer mode used for previous operation is displayed on the setting temperature screen. Re-pressing the TIMER key blinks the timer mode. Re-pressing this TIMER key shifts the indication into the next timer mode with blinking. Select the character for auto start operation "AStr", and press the ENTER key. The measurement temperature screen displays the character "Sv", which indicates the temperature setting. The setting temperature screen displays the current setting temperature with blinking. The AUTO START lamp blinks, too.
- ③ Set the temperature using the "▼▲".
- ④ Press the ENTER key again. The measurement temperature display screen displays the character "tim", which indicates the timer setting. The setting temperature display screen displays the current setting time with blinking.
- ⑤ Set the time using the "▼▲".

#### Timer function:

- The maximum setting time is "999 hours and 50 minutes".
- The time can be set in increments of a minute under 99 hours and 59 minutes.
- It can be set in increment of ten minutes over 100 hours.
- The "▼▲" can change the setting time quickly when it is pressed continuously. Press them discontinuously when fine adjustment is needed.

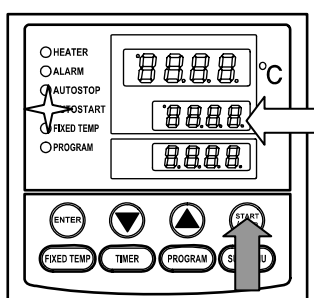


#### 2. Start timer operation

- Press the START/STOP key for one second after deciding the time.
- Timer operation starts with the AUTO START lamp lighting on.

## Auto Start Operation

---

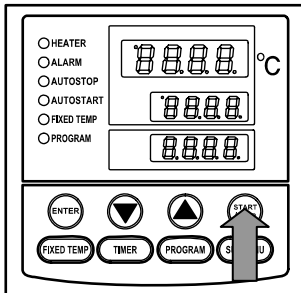

### 3. Stop/terminate timer operation

- The operation starts automatically at setting time.
- Press the START/STOP key for one second to stop or terminate operation. The screen returns to the initial setting screen.

---

### To correct or check setting...


Changing the setting temperature or time during operation is possible by pressing the TIMER key. Use the "▼▲" to change the setting value. Press the ENTER key respectively after changing the setting. (Note that the time setting is required using the value calculated by adding a new additional time to the already passed time in this case.)

Press the "▼" to display the setting temperature, operation mode and residual time on the setting temperature screen.

Note that the setting condition is impossible to change once starting the operation after passing the auto start operation time. In this case, stop the operation by pressing START/STOP key, and reset to initial status.

## Program Operation

This operation is used to change the temperature according to the setting temperature and time.

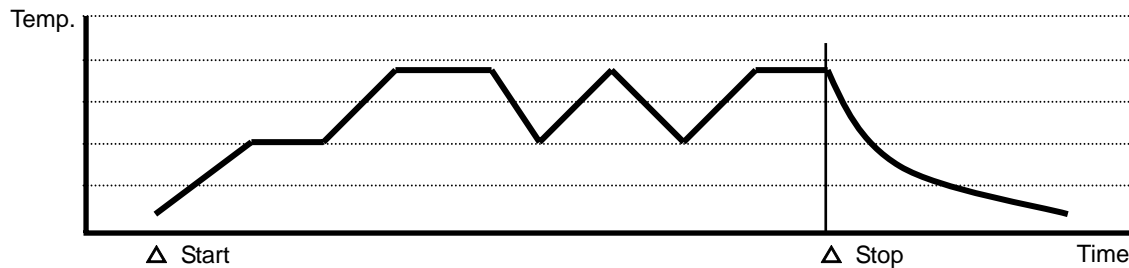

### Program types

Six patterns of program types maximum can be input.

|             |            |   |
|-------------|------------|---|
| <b>PrG1</b> | -          | 1 program pattern using 30 steps maximum can be created.  |
| <b>PrG2</b> | <b>PA1</b> | 2 program patterns using 15 steps maximum can be created. |
|             | <b>PA2</b> |   |
| <b>PrG3</b> | <b>PA1</b> | 3 program patterns using 10 steps maximum can be created. |
|             | <b>PA2</b> |   |
|             | <b>PA3</b> |   |

### Before inputting program...

Input program patterns before program operation.

- ① Check the number of steps in a created program and their setting temperature/time. Use the program preparation sheet in pages 29 and 30 to check.
- ② Check the temperature rise/fall capability of the unit. Set the time within the capability above. Suppose, for instance, that in the unit which has capability of increasing or decreasing temperature by 3°C within ten minutes, about 35 minutes is needed to increase or decrease temperature by 10°C from current temperature

#### Repeat function:

Repeat function is useful in case the operation uses the program repeating the same program steps. Refer to page28 for the function.

- ① Check if the controller has sufficient free pattern for the number of steps to be created.
- ② The steps, however, using the repeat function mentioned above are not counted.

### Temperature fall/rise curve


The temperature fall curve and temperature rise curve for IQ821 are shown below.

The numeric value indicates the necessary time between temperatures. Temperature stability time after reaching to the setting temperature is necessary to be added. Make sure to conduct a test run before setting the optimum time.

**20°C to 50°C: 25min.**  
**20°C to -10°C: 45min.**  
 (Condition: room temperature 23°C, no load)


## Program Operation

### Program creation

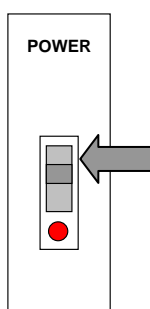

#### 1. Turn on the power

- Turn on the power switch of the unit.
- The display on the controller lights on.
  - ❖ The default value is displayed for about four seconds after turning on the power. The screen then displays the initial setting. The current temperature in furnace, operation mode character and setting temperature of overheating prevention device are displayed on respective screens.

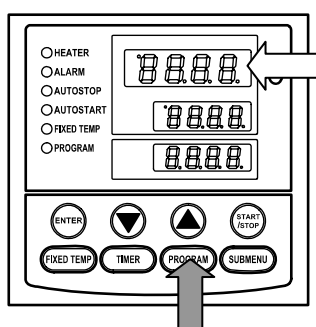

#### 2. Select program mode/program pattern

##### ① Press PROGRAM key.

The previous program mode is displayed on the setting temperature screen.

One more pressing the PROGRAM key changes the indication status of the current selected program mode into blinking.


One more pressing the PROGRAM key changed the indication into the next program mode with blinking.

##### ② Select the required program mode, and press the ENTER key.

- In the case of selecting "PrG1", "End" is displayed on the measurement temperature screen, and the number of the steps registered into the setting temperature screen is displayed with blinking.
- In the case of selecting "PrG2", "PA1" is displayed on the measurement temperature screen, and the pattern number is displayed on the setting temperature screen with blinking. Select the pattern "1" or "2" using ▼▲ key. Pressing ENTER key displays "End" on the measurement temperature screen, and the number of the steps registered into the setting temperature screen is displayed with blinking.
- In the case of selecting "PrG3", select the pattern "1", "2", or "3" with the same operation.

## Program Operation

The example shown below explains the method of program registration using "PrG3".

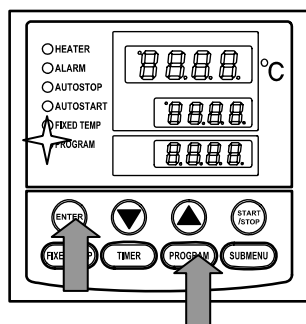


### 3. Register program

- ① Select "PrG3" referring to 2 mentioned above.
- ② Input the number of steps, temperature and time for respective steps using the program creation sheet.
- ③ Press the ENTER key. The "PAt" is displayed on the measurement temperature screen, and the number is displayed on the setting temperature screen with blinking.  
("End" is displayed if "PrG1" is selected. In this case, go to ⑥)
- ④ Select the unused pattern from among Pat1, Pat2 and Pat3 using the "▲▼".
- ⑤ Press the ENTER key. "End" is displayed and the step number "n" is also displayed with blinking.
  - ❖ "End" is a character which indicates the total step number to be used.
- ⑥ INPUT "8", which is the total step number to be used here, using the "▲▼".
- ⑦ Press the ENTER key. The character "SV-1", which indicates the setting temperature of the first step, is displayed on the measurement temperature screen. The current setting temperature is also displayed on the setting temperature screen with blinking.
- ⑧ Set the temperature of the first step using the "▲▼".
- ⑨ Press the ENTER key. The character "t-1", which indicates the setting time of the first step, is displayed on the measurement temperature screen. The current setting time is also displayed on the setting temperature screen with blinking.
  - ❖ Before setting the time, check the temperature rise/fall capability of unit.
  - ❖ Add an extra considering the temperature stability time.
  - ❖ The setting time of timer in respective steps is 999 hours and 50 minutes maximum.
- ⑩ After the time is set, press the ENTER key.  
The character "SV-2", which indicates the setting temperature of the second step, is displayed. In the same way, input the temperature and time for respective steps using the program creation sheet.
- ⑪ The different method is necessary where program repeat function is used. In this case, press the SUBMENU key after setting the time in the step where the repeat operation is to be used. This enters to the repeat function setting mode.
  - ❖ Follow the "Use program repeat function" in page 28 for the input method of program repeating function.
- ⑫ The screen returns to the initial setting screen after the setting of temperature and time in the final step is completed.

### Verification run:


Make sure to check the setting temperature and time by operating the unit without load before performing actual run with samples.

## Program Operation

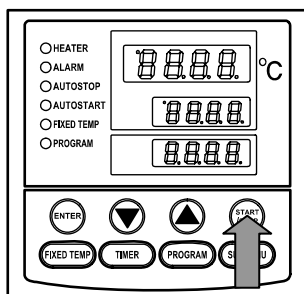

### 4. Start program operation

- Press the START/STOP key for about one second. The program operation previously set starts.
- The PROGRAM lamp lights on and the setting temperature screen displays the step currently under operation.
  - ❖ Press the "▼" to check the setting temperature and residual time of step currently under operation on the setting temperature screen.
  - ❖ Press the START/STOP key for one second to stop operation.

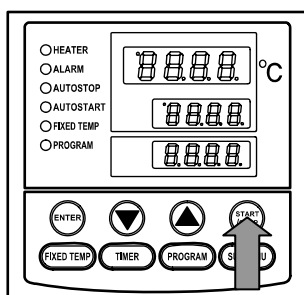

### 5. End program operation

- Buzzer continues to sound for about five minutes at operation stop.
- The measurement temperature screen displays the character "END", which indicates the termination of program.
- Press the START/STOP key to return to the initial screen.

### Timer function:

- The maximum setting time is "999 hours and 50 minutes".
- The time can be set in increments of a minute under 99 hours and 59 minutes.
- It can be set in increment of ten minutes over 100 hours.
- The "▼▲" can change the setting time quickly when it is pressed continuously. Press them discontinuously when fine adjustment is needed.

### To correct or check setting...

Press the FIXED TEMP key to correct the created program or to check the setting value. The screen returns to the former one, where correction or check is possible.

Last screen is displayed when the FIXED TEMP key is once pressed.

**Note:** Correction or check should be made on the program setting screen.


### Wait operation in program operation

The succeeding step does not start in case the measurement temperature does not reach to, or exceeds the setting temperature when a program goes to the next step in program operation. This unit, however, is previously set to carry out the next step if the measurement temperature is within  $\pm 3^{\circ}\text{C}$  of the setting temperature.

## Program Operation

### Use program repeat function

This section explains how to register the program repeat (repeating a program pattern) in program operation.

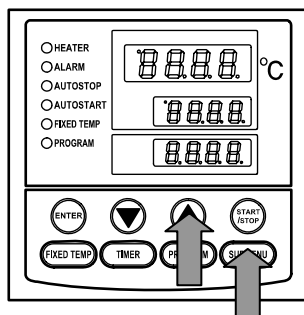

This section explains the registration procedure of program using repeat function in "3. Register program" above.

The procedure sets the step number to be repeated "PS-n" and repeating times "Pc-n"(n: input step number)

- ① Press the SUBMENU key in stead of the ENTER key after setting the time in the step where the repeat operation is to be used. This enters to the repeat function setting mode.
- ② The measurement temperature screen displays the character "PS-n", which indicates the step to be repeated in the program pattern. The measurement temperature screen indicates "PS-7" in the example because repeat function is used at the seventh step. The step number 1 to 7 can be input in the setting temperature display screen. Enter the number (1 in the example) using the "▲▼".
- ③ Press the SUBMENU key.  
The measurement temperature screen displays the character "Pc-n", which indicates the repeating times. Enter the value of repeating times with the "▲▼".
- ④ The screen goes to that for the next step when the SUBMENU key is pressed again.

### To correct or check setting...

Correction of setting during the repeat setting mode is impossible.

To correct or check the setting, end the setting of step currently input. Press the FIXED TEMP key after the temperature setting screen for the next step appears. The screen returns to the former one and re-setting is possible.

**Note:** Correction or check should be made on the program setting screen.

## Program Operation

## Programming Preparation Form 1

(Please use this form by making copies)

|                       |                       |                       |            |                   |  |
|-----------------------|-----------------------|-----------------------|------------|-------------------|--|
| <b>Register with:</b> | <b>PrG1 PrG2 PrG3</b> | <b>PAt1 PAt2 PAt3</b> | <b>No.</b> |                   |  |
| <b>Project Name</b>   |                       |                       |            | <b>Date</b>       |  |
|                       |                       |                       |            | <b>Programmer</b> |  |

## Program Pattern

[illegible]



## Program Operation

### Programming Preparation Form 2

(Please use this form by making copies)

|                |                |             |            |  |
|----------------|----------------|-------------|------------|--|
| Register with: | PrG1 PrG2 PrG3 | PA1 PA2 PA3 | No.        |  |
| Project Name   |                |             | Date       |  |
|                |                |             | Programmer |  |



### Input Value

|         | Temperature (°C) | Time (min.) | Repeat Function |
|---------|------------------|-------------|-----------------|
| Step 1  |                  | :           | Step No./Times  |
| Step 2  |                  | :           | /               |
| Step 3  |                  | :           | /               |
| Step 4  |                  | :           | /               |
| Step 5  |                  | :           | /               |
| Step 6  |                  | :           | /               |
| Step 7  |                  | :           | /               |
| Step 8  |                  | :           | /               |
| Step 9  |                  | :           | /               |
| Step 10 |                  | :           | /               |
| Step 11 |                  | :           | /               |
| Step 12 |                  | :           | /               |
| Step 13 |                  | :           | /               |
| Step 14 |                  | :           | /               |
| Step 15 |                  | :           | /               |
| Step 16 |                  | :           | /               |
| Step 17 |                  | :           | /               |
| Step 18 |                  | :           | /               |
| Step 19 |                  | :           | /               |
| Step 20 |                  | :           | /               |
| Step 21 |                  | :           | /               |
| Step 22 |                  | :           | /               |
| Step 23 |                  | :           | /               |
| Step 24 |                  | :           | /               |
| Step 25 |                  | :           | /               |
| Step 26 |                  | :           | /               |
| Step 27 |                  | :           | /               |
| Step 28 |                  | :           | /               |
| Step 29 |                  | :           | /               |
| Step 30 |                  | :           | /               |

## Other Functions

### Use calibration offset function


Calibration offset is a function which corrects the difference between the temperature in furnace and that of controller (sensor temperature) if arises. The function parallel corrects the difference either to the plus or minus side within the whole temperature range of unit. The function can be set or cancelled by the SUBMENU key.

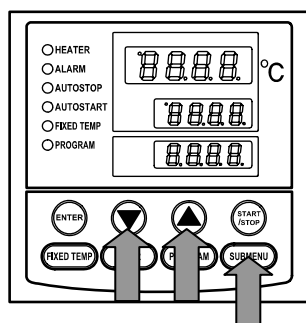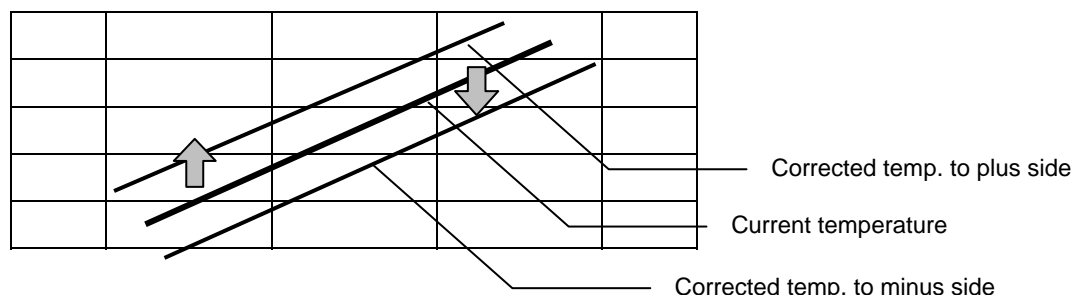

- ① Start operation with the target setting temperature. Check the temperature in furnace (temperature of sample) with a thermograph after it is stabilized.
  - ② Check the difference between the setting temperature and that in furnace (temperature of sample).
  - ③ Press the SUBMENU key. Select the character "cAL", which indicates the calibration offset, using the "▲▼", and then press the ENTER key.
  - ④ Input the difference using the "▲▼" and then press the ENTER key. This completes the setting.
- ❖ The setting range of offset correction temperature is +99°C to plus side and -99°C to minus side respectively.  
When it is set to the minus side, the temperature on the measurement temperature display screen falls by the setting temperature, while the temperature on furnace rises.  
When it is set to the plus side, the temperature on the measurement temperature display screen rises by the setting temperature, while the temperature on furnace falls.
  - ❖ The unit has two-point correction function, which performs offset between low-temperature zone and high-temperature zone.
  - ❖ Please consult our local branch office when carrying out validation of temperature controller.

### Use lock function

This function locks the operation status previously set. The function can be set or cancelled by the SUBMENU key.

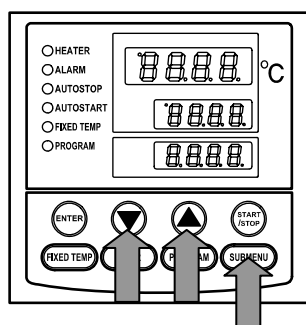

- ① Press the SUBMENU key. Select the character "Lock", which indicates the lock of setting value, using the "▲▼", and then press the ENTER key.
  - ② The setting temperature screen displays "oFF". The setting value is locked when it is turned to "o n" using the "▲".
  - ③ Press the SUBMENU key again to cancel the lock. Select the character "Lock", which indicates the lock of setting value, using the "▲▼", and then press the ENTER key. Select "oFF" with the "▼" and then press the ENTER key to cancel the function.
- ❖ All keys other than the START/STOP and SUBMENU keys are lock when the lock function is on.

### **WARNING!**

#### **If a problem occurs**



If smoke or strange odor should come out of this unit for some reason, turn off the power key right away, and then turn off the circuit breaker and the main power. Immediately contact a service technician for inspection. If this procedure is not followed, fire or electrical shock may result. Never perform repair work yourself, since it is dangerous and not recommended.

#### **Substances that cannot be used**



Never use explosive substances, flammable substances and substances that include explosive or flammable ingredients in this unit. Explosion or fire may occur. (Refer to page43 "List of Dangerous Substances".)

### **CAUTION!**

#### **Do not step on this unit**



Do not step on this unit. It will cause injury if this unit fall down or break.

#### **Do not put anything on this unit**



Do not put anything on this unit. It will cause injury if fall.

#### **During a thunder storm**



During a thunderstorm, turn off the power key immediately, then turn off the circuit breaker and the main power. If this procedure is not followed, fire or electrical shock may be caused.

#### **When open/close door...**



Do not get close to the traveling range of door when opening or closing it. It may hit your hands or head and result in an injury.

#### **Keep door close during operation.**



The heater is heated abnormally if the door is left opened during operation. Make sure to operate the unit with the door closed.

#### **Do not use corrosive sample**



Stainless steel is used for interior; however, it may be corroded by strong acid etc. And the door packing made of vinyl chloride may be corroded by some kind of solvent, e.g. alkaline, oil, halogen etc. Do not use the sample includes those.

#### **Use under proper temperature range**




Operational temperature range of this unit is -10 to 50°C. Never set the temperature out of that.

## Setting of sample

- ⊘ Since the withstand load of the attached shelf plate is about 15kg per one plate, do not set heavier sample than 15kg. When setting several sample, set them as dispersed as possible.
- ! Too much sample setting could cause the improper control of the temperature. For keeping the proper temperature, keep more than 30% space against whole size of the shelf plate, and set the sample.


## Do not put sample on the internal base

- ⊘ Operating this unit with the sample put directly on the bottom of the inner furnace may affect the feature of temperature. Therefore, never put the sample on the bottom of the inner furnace. Besides, since the heater and vaporizer are installed on the wall of the inner of the unit, set the sample so as not to contact it directly to the wall of the unit. Align the sample onto the optional shelf.

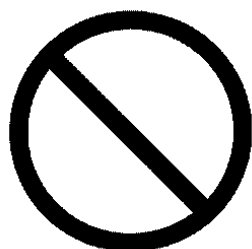

**Samples  
on the bottom**

**Set the shelf**

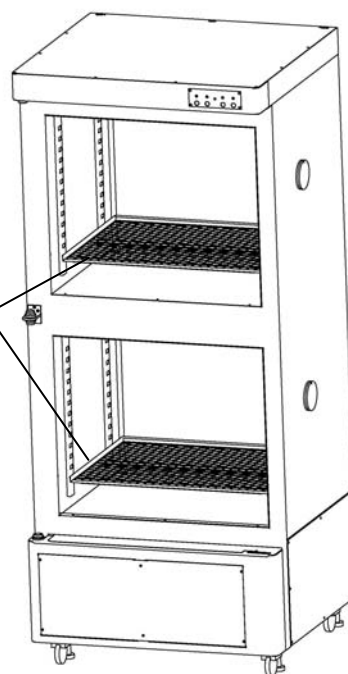

## Recovering after power failure

- ! When power is supplied after a power failure, the device automatically starts operation again with the same state as just before the power failure. It is danger that the device starts unattached operation after a power failure. We recommend for you to turn off the switch of this unit if a power failure occurs during operation.

## After installing

- ! It may cause injure to a person if this unit falls down or moves by the earthquake and the impact. etc.. To prevent, take measures that the unit cannot fall down.

## Daily Inspection and Maintenance

For the safety use of this unit, please perform the daily inspection and maintenance without fail. Using the city water to this unit might attach dirt. Do inspect and maintain this point while performing daily inspection and maintenance.

### **WARNING!**


- Disconnect the power cable from the power source when doing an inspection or maintenance unless needed.
- Perform the daily inspection and maintenance after returning the temperature of this unit to the normal one.
- Do not disassemble this unit.

### **CAUTION!**

- Use a well-drained soft cloth to wipe dirt on this unit. Do not use benzene, thinner or cleanser for wiping. Do not scrub this unit. Deformation, deterioration or color change may result in.

## Monthly maintenance

- Check the earth leakage breaker function.
  1. Connect the power cord.
  2. Turn the breaker on.
  3. Push the red test switch by a ballpoint pen etc.
  4. If there is no problem, the earth leakage breaker will be turned off.

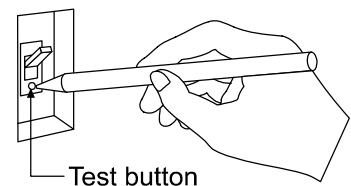


- Check the movement of the independent overheating prevention device.

Perform the fixed temperature operation of device with certain preset temperature. Then set the operation temperature of independent overheating prevention device to the value approximately 5°C lower than the preset temperature of device.

In normal condition, the device shuts off the heating circuit in a few seconds, at the same time the TROUBLE lamp lights on and the "Er19" is indicated accompanied with a warning buzzer.

- Clean the fin on condenser.

Remove the grill on the front, then remove the dust on the surface of fin on condenser with a vacuum cleaner.

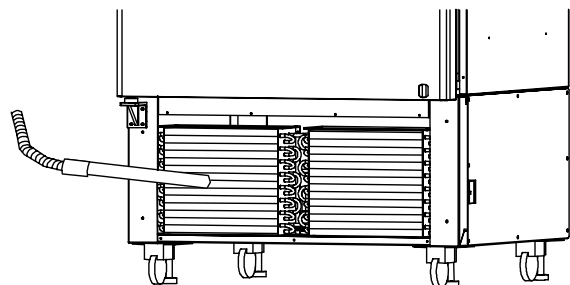

### **CAUTION!**

Do not soak the fin for cleaning.

- ❖ Make sure to check the movement of earth leakage breaker above and overheating prevention device before long term operation or night-time unmanned operation.

For any questions, contact the dealer who you purchased this unit from, or the nearest sales division in our company.

### When not using this unit for long term / When disposing

#### **CAUTION!**

##### When not using this unit for long term...

- Turn off the power and disconnect the power cord.

#### **WARNING!**

##### When disposing...

- Keep out of reach of children.
- Remove the door and driving parts.

### ***Environmental protection should be considered***

We request you to disassemble this unit as possible and recycle the reusable parts considering to the environmental protection. The feature components of this unit and materials used are listed below.

| Component Name           | Material  |
|--------------------------|---|
| <b>Exterior Parts</b>    |   |
| Outer covering           | Chrome-free electro galvanized chemical proof bake finished steel plate |
| Inner furnace            | Stainless steel   |
| Heat insulation material | Expanded polystyrene  |
| Plates                   | Resins  |
| <b>Electrical Parts</b>  |   |
| Switches, Relay          | Resin, Copper and other   |
| Control panel            | ABS resin   |
| Circuit boards           | Composite of glass fiber and other                                      |
| Heater                   | Iron- chrome heater   |
| Circuit boards           | Board, Condenser, Transformer and other                                 |
| Power cord, Wiring       | Synthetic rubber or resin coated wiring materials                       |
| Cooling medium           | HFC-R404A*  |

\* The CFC (chlorofluorocarbon) is specified as the primary specific gas according to the Breaking Law for CFC Collection.

Emitting the CFC into the atmosphere in vain is prohibited strictly.

In the case of scrapping this unit, it is required to collect CFC from this unit.

## Safety Device and Error Code

This unit has an automatic diagnosis function built in the controller and safety devices independent of the controller. The table below shows the cause and the solution method when the safety device operates.

### Error Code:

When an abnormal condition occurs, an error code appears and the alarm lamp lights in the controller, the buzzer sounds simultaneously. Record the error code and turn off the power of device immediately.

| Safety Device                  | Notify                                     | Cause/Solution   |
|--------------------------------|--|--|
| Sensor trouble detection       | "ALARM" lamp lights on,<br>"Er.01" appears | <ul style="list-style-type: none"> <li>Temperature sensor is broken or disconnected.</li> <li>Make a call for service.</li> </ul>  |
| SSR short-circuit detection    | "ALARM" lamp lights on,<br>"Er.02" appears | <ul style="list-style-type: none"> <li>Triac is in short-circuit</li> <li>Make a call for service.</li> </ul>  |
| Heater disconnecting detection | "ALARM" lamp lights on,<br>"Er.03" appears | <ul style="list-style-type: none"> <li>Heater is disconnected.</li> <li>Make a call for service.</li> </ul>  |
| Memory error                   | "ALARM" lamp lights on,<br>"Er.15" appears | <ul style="list-style-type: none"> <li>Failure in internal memory.</li> <li>Make a call for service.</li> </ul>  |
| Internal communication error   | "ALARM" lamp lights on,<br>"Er.17" appears | <ul style="list-style-type: none"> <li>Failure in internal communication or temperature inputting circuit.</li> <li>Make a call for service.</li> </ul>  |
| Overheating                    | "ALARM" lamp lights on,<br>"Er.19" appears | <ul style="list-style-type: none"> <li>Overheating prevention device is in operation.</li> <li>Reset the power supply, and then adjust the setting temperature of the overheating protection device.</li> <li>If the state does not recover, make a call for service.</li> </ul> |
| Measurement temperature error  | "ALARM" lamp lights on,<br>"----" appears  | <ul style="list-style-type: none"> <li>Measurement value is out of display range.</li> <li>Make a call for service.</li> </ul>   |

## Trouble Shooting

| Problem  | Possible Cause                  | Solution                                |
|--|---------------------------------|---|
| The device does not start when turning on the power switch.              | Earth leakage breaker failure   | Replace the part.                       |
|  | Power switch failure            | Replace the part.                       |
|  | Power source failure            | Connect to the appropriate power source |
| Temperature does not rise.   | Heater disconnection            | Replace the part.                       |
|  | SSR failure                     | Replace the part.                       |
|  | Temperature controller failure  | Replace the part.                       |
| Temperature does not fall.   | Temperature sensor failure      | Replace the part.                       |
|  | Temperature controller failure  | Replace the part.                       |
|  | Clogging of condenser with dust | Clean the fin on condenser              |
|  | Much frost on evaporator        | Defrost                                 |
|  | Relay failure                   | Replace the part.                       |
|  | Power source failure            | Connect to the appropriate power source |
|  | Refrigerator failure            | Repair or replace the part.             |
| Heater does not stop working when the temperature reaches setting value. | SSR failure                     | Replace the part.                       |
|  | Temperature controller failure  | Replace the part.                       |

In the case if the error other than listed above occurred, turn off the power switch and primary power source immediately. Contact the shop of your purchase or nearest Yamato Scientific Service Office.



### In Case of Request for Repair

If the failure occurs, stop the operation, turn OFF the power switch, and unplug the power plug. Please contact the sales agency that this unit was purchased, or the Yamato Scientific's sales office.

#### < Check following items before contact >

- ◆ Model Name of Product
  - ◆ Production Number
  - ◆ Purchase Date
  - ◆ About Trouble (in detail as possible)
- } See the production plate attached to this unit.

### Minimum Retention Period of Performance Parts for Repair

The minimum retention period of performance parts for repair of this unit is 7 years after discontinuance of this unit.

The "performance part for repair" is the part that is required to maintain this unit.

|   |  |
|---|--|
| Model   | IQ822  |
| Method  | Forced circulation   |
| Temperature control range ※1                  | -10 to 50°C (Common to upper/lower unit)   |
| Temperature adjustment accuracy ※1            | ±0.3°C (Refrigerator is in continuous operation, Common to upper/lower unit)   |
| Temperature distribution accuracy ※1          | ±1.0°C (Refrigerator is in continuous operation, Common to upper/lower unit)   |
| Time required to reach highest temperature ※1 | 20°C to 50°C: Approx. 25min.   |
| Time required to reach lowest temperature ※1  | 20°C to -10°C: Approx. 45min.  |
| Inner furnace                                 | Stainless steel  |
| Outer covering                                | Chrome-free electro galvanized chemical proof bake finished steel plate  |
| Door  | Chrome-free electro galvanized chemical proof bake finished steel plate,<br>With lock unit   |
| Inner door                                    | Tempered glass   |
| Heat insulation material                      | Expanded polystyrene (CFC-free)  |
| Refrigerator                                  | Air-cooled and full-closed type reciprocating compressor, 250W × 2   |
| Cooling medium                                | HFC-R404A  |
| Defrost function                              | Manual defrost (manually ON/automatic OFF), Cycle defrost operation  |
| Fan of blower                                 | Axial fan × 2  |
| Heater  | Iron-chrome wire heater 550W × 2   |
| Cable port                                    | Inner diameter: 50mm (right surface of the upper/lower unit)   |
| Temperature control system                    | VS4 type 30 steps and 3 patterns programmable controller,<br>PID control by microcomputer  |
| Setting method                                | Digital setting by menu keys and up/down keys  |
| Display method                                | Setting temperature: Digital display by four-digit green LED,<br>Temperature: Digital display by four-digit red LED  |
| Timer display                                 | 1min to 99h59min, 100 to 999.5h  |
| Operation mode                                | Fixed temperature, Quick auto stop, Auto stop, Auto start, Program operation   |
| Additional functions                          | Timer function, Calibration offset, 3 stages auto tuning function  |
| Sensor  | For temperature control: Platinum resistance bulb,<br>For overheating prevention: K-thermocouple   |
| Safety devices                                | Self-diagnostic functions (Memory error, Failure of sensor, Heater disconnection, Failure of overheating prevention device, SSR short-circuit, At error, Automatic overheating prevention device), Key lock Function, Earth leakage breaker, Overheating prevention device |

|                                 |   |
|---------------------------------|---|
| External dimensions ※2          | 710W × 645D × 1630H mm                                    |
| Internal dimensions ※2          | 600W × 477D × 500H mm × 2                                 |
| Capacity                        | 143L × 2  |
| Withstand load of shelf         | 15kg/one shelf  |
| Number of shelf bracket step    | 13 (on each furnace)                                      |
| Interval of shelf bracket steps | 30mm  |
| Power supply                    | 100V AC single phase 20A, Rounded terminal                |
| Weight                          | 162Kg   |
| Accessories                     | Shelf (stainless punching metal) × 6 (3 for each furnace) |
|                                 | Shelf bracket × 12 (6 for each furnace)                   |
|                                 | Door key × 2  |
|                                 | Instruction manual  |

※1 The value for performance is under the condition of the power 100VAC, the ambient temperature of 23°C ±5°C, the humidity of 65%RH±20%, and without load.

※2 The projection is not included for external dimensions.


※ Operating environmental temperature range for this device is 5°C ~ 35°C.

## Optional Accessories

| Name   | Product code |
|--|--------------|
| Shelf (with bracket)                                     | 211221       |
| Temperature output terminal (4 to 20mA)                  | 281179       |
| Time up signal output terminal                           | 281180       |
| External communication terminal (RS485)                  | 281181       |
| External communication adapter (RS485/RS232C conversion) | 281182       |
| Alarm output terminal                                    | 281183       |

- ❖ Please specify the optional accessories other than the shelf board when you order the product.
- ❖ Please select either of the time up signal output terminal or the external communication terminal.

# Wiring Diagram

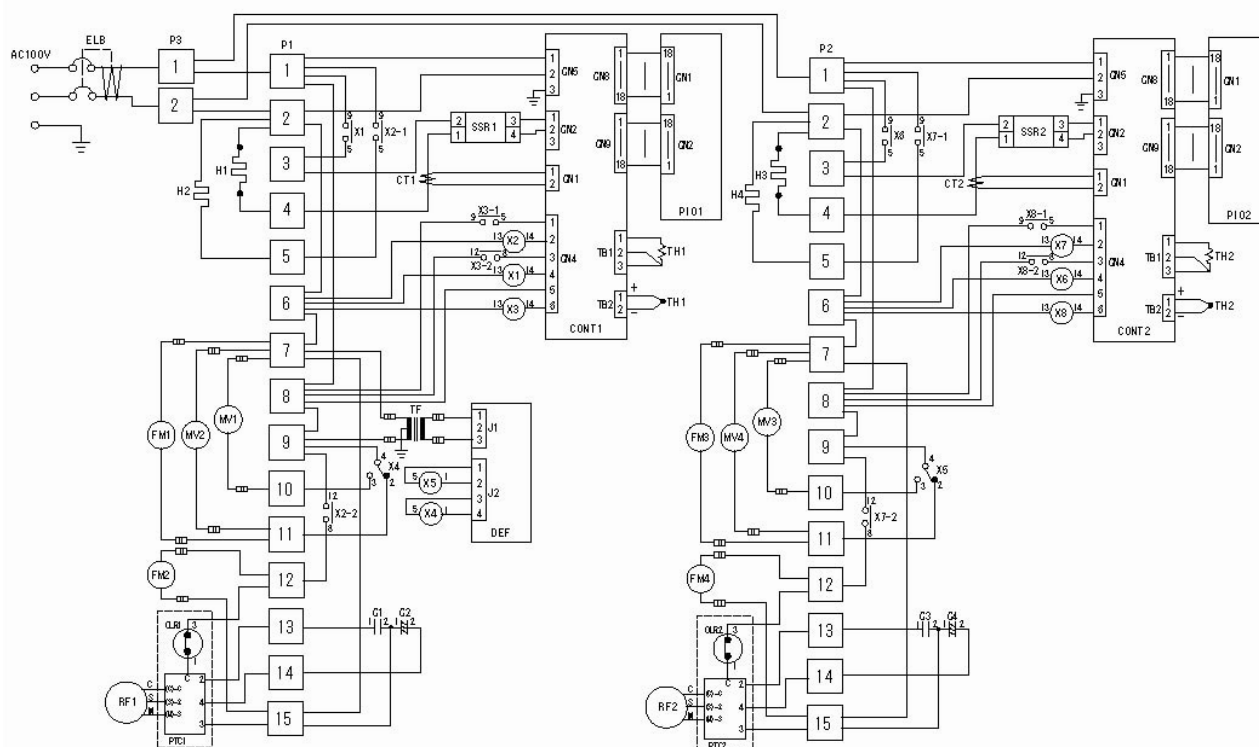

## <Lower unit>

| Symbol | Part name                    | Symbol | Part name                            | Symbol | Part name             |
|--------|------------------------------|--------|--------------------------------------|--------|-----------------------|
| P1     | Terminal block               | X1     | Relay (inner heater)                 | PIO1   | Display circuit board |
| H1     | Heater (inner)               | X2     | Relay (refrigerator)                 | CT1    | Current transformer   |
| H2     | Heater (door)                | X3     | Relay(overheating prevention device) | OLR1   | Overload relay        |
| FM1    | Fan motor (inner)            | X4     | Relay (solenoid valve)               | C1     | Operation condenser   |
| FM2    | Fan motor (refrigerator)     | TH1    | Temperature sensor (double)          | C2     | Start condenser       |
| MV1    | Solenoid valve (defrost)     | SSR1   | Solid state relay                    | PTC1   | PTC starter           |
| MV2    | Solenoid valve (return duct) | CONT1  | PLANAR board                         | RF1    | Refrigerator          |

## <Upper unit>

| Symbol | Part name                    | Symbol | Part name                            | Symbol | Part name             |
|--------|------------------------------|--------|--------------------------------------|--------|-----------------------|
| P2     | Terminal block               | X6     | Relay (inner heater)                 | PIO2   | Display circuit board |
| H3     | Heater (inner)               | X7     | Relay (refrigerator)                 | CT2    | Current transformer   |
| H4     | Heater (door)                | X8     | Relay(overheating prevention device) | OLR2   | Overload relay        |
| FM3    | Fan motor (inner)            | X5     | Relay (solenoid valve)               | C3     | Operation condenser   |
| FM4    | Fan motor (refrigerator)     | TH2    | Temperature sensor (double)          | C4     | Start condenser       |
| MV3    | Solenoid valve (defrost)     | SSR2   | Solid state relay                    | PTC2   | PTC starter           |
| MV4    | Solenoid valve (return duct) | CONT2  | PLANAR board                         | RF2    | Refrigerator          |

## <Common parts>

| Symbol | Part name             | Symbol | Part name      | Symbol | Part name   |
|--------|-----------------------|--------|----------------|--------|-------------|
| ELB    | Earth leakage breaker | P3     | Terminal block | TF     | Transformer |
| DEF    | Defrost circuit board | -      | -              | -      | -           |

## Replacement Parts Table

| Symbol            | Part Name             | Specification                   | Manufacturer       | Code No.      |
|-------------------|-----------------------|---------------------------------|--------------------|---------------|
| X1, 2, 3, 6, 7, 8 | Relay                 | AP3124K                         | Panasonic          | A0334         |
| X4, 5             | Relay                 | G2R-1-T DC6V                    | OMRON              | 2-05-000-0026 |
| P1, 2             | Terminal block        | TFD250ABC-15P                   | TERMINAL           | LT00031667    |
| P3                | Terminal block        | ATK-20-2P                       | TOYOGIKEN          | LT00004704    |
| FM1, 3            | Fan                   | UF12A10BTH                      | Yamato Scientific  | 2-15-000-0010 |
| SSR1,2            | SSR                   | TRS5225 25A                     | Yamato Scientific  | 2-16-000-0035 |
| TF                | Transformer           | IVFR 100V                       | Yamato Scientific  | 2-18-000-0044 |
| TH1, 2            | Temperature sensor    | Pt100 /K-Thermocouple $\Omega$  | Yamato Scientific  | LT00001081    |
| ELB               | Earth leakage breaker | NV-L22GR 30A                    | MITSUBISHIELECTRIC | LT00029777    |
| MV1,3             | Solenoid valve        | SEV-502DXF                      | Saginomiya         | 3-02-006-0003 |
| MV2,4             | Solenoid valve        | NEV-603DXF                      | Saginomiya         | 3-02-006-0004 |
| RF1, 2            | Compressor            | RL2557-HB                       | HITACHI            | LT00028791    |
|                   | Condenser             | 1-000-0005-07-0                 | SANYO              | 3-01-006-0007 |
| FM2, 4            | Fan motor             | SE4-C041NP                      | SANYO              | 3-01-006-0006 |
|                   | Dryer                 | KC-10432                        | Meiko Kiki         | 3-20-003-6002 |
|                   | Charge valve          | FV222D0010C                     | Meiko Kiki         | 3-25-001-0002 |
|                   | Accumulator           | SAC-154000                      | SANYO Electric     | 3-23-000-0001 |
| H1, 3             | Heater                | 550W/100V                       | Yamato Scientific  | IN161         |
| H2, 4             | Cord heater           | 38W/100V                        | Yamato Scientific  | LT00002705    |
|                   | Evaporator            |                                 | Yamato Scientific  | IN600-30310   |
|                   | Capillary             | $\phi 1.0 \times 3000\text{mm}$ | Yamato Scientific  | LT00033938    |
| CONT1, 2          | PLANAR board          | VS4                             | Yamato Scientific  | 1-02-000-0053 |
| PIO1, 2           | Display circuit board | VS4                             | Yamato Scientific  | 1-02-000-0051 |
| DFF               | Defrost circuit board | IQ820                           | Yamato Scientific  | LT00001082    |

## List of Dangerous Substances



Never use explosive substances, flammable substances and substances that include explosive or flammable ingredients in this unit.

### EXPLOSIVE

|                   |  |
|-------------------|--|
| <b>EXPLOSIVE:</b> | Ethylene glycol dinitrate (nitro glycol), Glycerin trinitrate (nitroglycerine), Cellulose nitrate (nitrocellulose), and other explosive nitrate esters |
|                   | Trinitrobenzene, Trinitrotoluene, Trinitrophenol (picric acid), and other explosive nitro compounds  |
|                   | Acetyl hidroperoxide (peracetic acid), Methyl ethyl ketone peroxide, Benzyl peroxide, and other organic peroxides                                      |

### FLAMMABLE

|                            |   |
|----------------------------|---|
| <b>IGNITING:</b>           | Lithium (metal), Potassium (metal), Sodium (metal), Yellow phosphorus, Phosphorus sulfide, Red phosphorus, Celluloid compounds, Calcium carbide, Lime phosphate, Magnesium (powder), Aluminum (powder), Powder of metals other than magnesium and aluminum, Sodium hydrosulfite |
| <b>OXIDIZING:</b>          | Potassium chlorate, Sodium chlorate, Ammonium chlorate, and other chlorate  |
|                            | Potassium perchlorate, Sodium perchlorate, Ammonium perchlorate, and other perchlorate  |
|                            | Potassium peroxide, Sodium peroxide, Barium peroxide, and other inorganic peroxide  |
|                            | Potassium nitrate, Sodium nitrate, Ammonium nitrate, and other nitrate  |
|                            | Sodium chlorite and other chlorites   |
|                            | Calcium hypochlorite and other hypochlorites  |
| <b>INFLAMMABLE LIQUID:</b> | Ethyl ether, Gasoline, Acetaldehyde, Propylene chloride, Carbon disulfide, and other flammable substances having a flash point of lower than -30°C  |
|                            | Normal hexane, ethylene oxide, acetone, benzene, methyl ethyl ketone, and other flammable substances having a flash point of -30°C or higher but lower than 0°C   |
|                            | Methanol, Ethanol, Xylene, Pentyl acetate (amyl acetate), and other flammable substances having a flash point of 0°C or higher but lower than 30°C  |
|                            | Kerosene, Light oil (gas oil), Oil of turpentine, Isopentyl alcohol (isoamyl alcohol), Acetic acid, and other flammable substances having a flash point of 30°C or higher but lower than 65°C   |
| <b>FLAMMABLE GAS:</b>      | Hydrogen, Acetylene, Ethylene, Methane, Propane, Butane, and other flammable substances which assume a gaseous state at 15°C and 1 atm  |

(Source: Appendix Table 1 of Article 6 of the Industrial Safety and Health Order in Japan)



## Responsibility

Please follow the instructions in this document when using this unit. Yamato Scientific has no responsibility for the accidents or breakdown of device if it is used with a failure to comply. Never conduct what this document forbids. Unexpected accidents or breakdown may result in.

## Note

- ◆ The contents of this document may be changed in future without notice.
- ◆ Any books with missing pages or disorderly binding may be replaced.

Instruction Manual for

**Programmable Low Temperature Incubator**

**Model IQ822**

First Edition Feb.8,2010

Revised Mar.2,2012

---

**Yamato Scientific Co., Ltd.**

2-1-6 Nihonbashi Honcho, Chuo-ku,  
Tokyo, 103-8432, Japan

<http://www.yamato-net.co.jp>